

# Gigaset

## A540

### Congratulations

By purchasing a Gigaset, you have chosen a brand that is fully committed to sustainability.


This product's packaging is eco-friendly!

To learn more, visit [www.gigaset.com](http://www.gigaset.com).



GIGASET. INSPIRING CONVERSATION.  
**MADE IN GERMANY**

## Gigaset A540

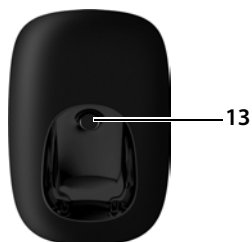

# Overview

## Handset

- 1 **Display**
- 2 **Status bar** ( → page 30)  
Icons display current settings and operating status of the telephone
- 3 **Display keys** ( → page 8)
- 4 **End call key, On/off key**  
End a call;  
Cancel function  
Go back one menu level ▶ **Press briefly**  
Return to idle status ▶ **Hold down**  
Switch the handset on/off (in display's idle status) ▶ **Hold down**
- 5 **Hash key**  
Keypad lock on/off (in display's idle status) ▶ **Hold down**  
Toggle between upper/lower case and digits;
- 6 **Recall key**  
Consultation call (flash) ▶ **Press briefly**  
Insert a dialling pause ▶ **Hold down**
- 7 **Microphone**
- 8 **Message key** ( → page 9)  
Access to the calls and message lists;  
**Flashing:** new message or new call
- 9 **Star key**  
In idle status: ▶ **Hold down**  
Deactivate the ringtone  
With an existing connection: ▶ **Press briefly**  
switch from pulse dialling to tone dialling
- 10 **Key 1**  
Select network mailbox ▶ **Hold down**
- 11 **Talk key / Handsfree key**  
Dial number displayed;  
Accept call; switch from earpiece to handsfree mode;  
Open the redial list ▶ **Press briefly**  
Start dialling ▶ **Hold down**
- 12 **Control key/Menu key** ( → page 8)

## Gigaset A540 base

- 13 **Registration/paging key**  
Locating a handset ("paging") → page 18. ▶ **Press briefly**  
Register handsets and DECT devices → page 18. ▶ **Hold down**

## Using the user guide effectively

### Icons



Warnings, the non-adherence to which can lead to injury to persons or damage to devices or generate costs.



Prerequisite, to be able to carry out the following action.



Important information regarding function and appropriate handling.

### Keys

Talk key / End call key

Number/letter keys 0... to 9...

Star key / Hash key

Message key / Recall key

Control key

Display keys



Overview of display icons ( → page 30).

### Functions, confirming and selecting

Confirm selection using

OK

One menu level back using

Back

Change to idle display using

Hold down

Function selected/activated

Function not selected/deactivated

### Procedures

Example: Activating/deactivating Auto answer

Illustration in the user guide:

▶ Menu ▶ Settings ▶ OK ▶ Telephony ▶ OK ▶ Auto Answer ▶ OK ( = activated)

Step:	Follow this procedure:
▶ Menu	In idle status press the display key <b>Menu</b> . The main menu opens.
▶  Settings	Select <b>Settings</b> using the control key .
▶ OK	Press OK to confirm. The submenu <b>Settings</b> opens.
▶  Telephony	Select <b>Telephony</b> using the control key .
▶ OK	Press OK to confirm. The submenu <b>Telephony</b> opens.
▶ <b>Auto Answer</b>	The activate/deactivate auto answer function appears as the first menu item.
▶ OK	Activate or deactivate using <b>OK</b> . The <b>Auto Answer</b> is activated <input checked="" type="checkbox"/> or deactivated <input type="checkbox"/> .












# Contents

<b>Overview</b> .....	<b>1</b>
Gigaset A540 base .....	1
Handset .....	1
Using the user guide effectively .....	2
<b>Safety precautions</b> .....	<b>4</b>
<b>Getting started</b> .....	<b>5</b>
<b>Using the telephone</b> .....	<b>8</b>
Making calls .....	9
Network mailbox .....	12
Messages .....	13
Phonebook (Address book) .....	14
<b>Additional functions</b> .....	<b>16</b>
Alarm clock .....	16
ECO DECT .....	17
<b>Expanding the functionality of the telephone</b> .....	<b>18</b>
Multiple handsets .....	18
Repeater .....	19
Operation with router .....	20
Operating a PABX .....	20
<b>Adjusting the telephone settings</b> .....	<b>21</b>
<b>Manufacturer's advice</b> .....	<b>24</b>
Guarantee Certificate .....	26
Appendix .....	27
Display icons .....	30
<b>Index</b> .....	<b>31</b>



Not all functions described in this user guide are available in all countries or with all network providers.

# Safety precautions

	<ul style="list-style-type: none"> <li>• Read the safety precautions and the user guide before use.</li> <li>• Explain their content and the potential hazards associated with using the device to your children.</li> <li>• The device cannot be used in the event of a power failure. In case of a power failure it is also <b>not</b> possible to make <b>emergency calls</b>.</li> <li>• Emergency numbers <b>cannot</b> be dialled if the <b>keypad/display lock</b> is activated!</li> </ul>
	<p>Use only the power adapter indicated on the device.</p>
	<p>Use only <b>rechargeable batteries</b> that correspond to the <b>specification</b> (see "Specifications"). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.</p>
	<p>Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Specifications").</p>
	<p>Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing. Your Gigaset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed. The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.</p>
	<p>The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.</p>
	<p>Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).</p>
	<p>If you give your Gigaset to a third party, make sure you also give them the user guide.</p>
	<p>Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.</p>
	<p>Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.</p>
	<p>To prevent loss of hearing, avoid listening at high volume over long periods of time.</p>

# Getting started

## Contents of the package

- One **base**,
- One power adapter for the base,
- One telephone cord,
- One **handset**,
- One battery cover (rear cover for the handset),
- Two batteries,
- One user guide.

## Setting up the base and charging cradle

The base and charging cradle are designed for use in closed, dry rooms within a temperature range of +5°C to +45°C.

- ▶ Position the base and charging cradle on a level, non-slip surface at a central point in the building or house, or mount the charging cradle onto the wall.

The device's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, marks on the surfaces cannot be completely ruled out.

- i** • Never expose the telephone to heat sources, direct sunlight or other electrical devices.
- Protect your telephone from moisture, dust, corrosive liquids and vapours.
- Pay attention to the range of the base. This is up to 50 m inside buildings and up to 300 m in unobstructed outdoor areas. The range is reduced when **Max. Range** is deactivated ( → page 17).

## Connecting the base

Telephone connection  
DSL/ADSL  
Router

Gigaset A540

220 - 240 V AC 50/60Hz



- i** • The power adapter must **always be connected**, as the telephone will not operate without a power supply.
- Only use the **supplied** power adapter and telephone cord. Pin connections on telephone cables can vary (pin connections → page 29).

## Setting up the handset for use

The display is protected by a plastic film: ▶ **Remove the protective film!**

### Inserting the batteries



Use only rechargeable batteries recommended by Gigaset Communications GmbH (→ page 28), as this could otherwise result in significant injury to health and material damage. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The telephone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.



▶ Insert the batteries (for correct +/- direction, see diagram).



▶ Insert the battery cover from the top **1**.  
▶ Then press the cover until it clicks into place **2**.



 
To open the battery cover:

▶ Grip the notch on the cover **3** and slide it downwards **4**.

### Charging the batteries

Charge the batteries fully prior to first use in the base/charging cradle.

The batteries are fully charged when the power icon ⚡ disappears from the display.



The handset may only be placed in the designated base/charging cradle.







- The battery may heat up during charging. This is not dangerous.
- After a time, the charge capacity of the battery will decrease for technical reasons.



## Display language

▶ Menu ▶  Settings ▶ OK ▶  Language ▶ OK ▶ ... select language with  ▶ OK (☑ = selected)


 If you do not understand the language currently set:  
▶  ▶  ▶ ... select language with  ▶ OK (☑ = selected)

## Registering the handset

Handsets contained in the package have already been registered to the base.

If, however, a handset has not been registered (display "Register handset" or "Place handset into base"), you must register it to the base.

- Registering automatically to Gigaset A540 base
  - ▶ Place the handset into the base

 If automatic registration does not work, the handset will have to be registered manually ( → page 18).

## Date and time

Set the date/time so that the correct date and time can be assigned to incoming calls, and so that you can use the alarm.

During set up:

▶ Time ▶ ... set date with  ▶ OK ▶ ... set time with  ▶ OK

During later use:

▶ Menu ▶  Settings ▶ OK ▶ Date/Time ▶ OK ▶ ... set date with  ▶ OK ▶ ... set time with  ▶ OK

The telephone is now ready for use.

# Using the telephone

## Switching the handset on/off

In idle status: ▶ Press and **hold** the End call key .

## Locking/unlocking the keypad

The keypad lock prevents any accidental use of the telephone.

Activating/deactivating keypad lock: ▶  **hold down**












- If a call is signalled on the handset, the keypad automatically unlocks. The call can be accepted.
- It then locks again when the call is finished.

## Control key

The control key allows you to navigate within menus and entry fields. In idle status or during a external call, it has the following functions:




In idle status		During a conversation	
Open phonebook.		Open phonebook.	
Open the main menu.		Mute microphone.	
Open list of handsets.		Initiate an internal consultation call.	
Open the <b>Audio Settings</b> (→ page 21) menu.		Adjust the loudspeaker volume for earpiece and handsfree mode.	

In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e.g.  for "press right on the control key".

## Display keys

Different functions are displayed over the function keys depending on the operating situation.

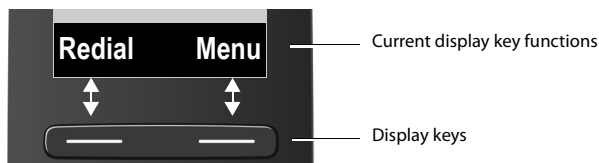

Example




## Menu guidance

The functions of the telephone are displayed on a menu that consists of several levels.


**Opening the main menu (in idle status):**

- ▶ Press **right**  on the control key ▶ ... scroll to the function with the control key  ▶ **OK**

**Returning to the previous menu level:**

- ▶ Press the display key **Back**  
or  
▶ **Briefly** press the End call key 


**Returning to idle status**

- ▶ Press and **hold** the End call key .






If no key is pressed, the display will **automatically** change to idle status after 2 minutes.

**Entering text**

- **Input position:** Numbers/letters/characters are inserted at the cursor position
- **Placing the cursor:** ▶ Press the control key 
- **Deleting characters to the left of the cursor:** ▶ Press the display key **Del**.

 


**Names in the phonebook**

- **Selecting letters/characters:** Multiple letters and characters are assigned to each key between  and , see character charts → page 29.  
Selecting desired letters/characters:  
... ▶ Press the key **briefly** several times in succession  
or ... ▶ Press and **hold** the key.
- **Lowercase, uppercase and digits for the following letters:** ▶ Press the hash key 






The first letter and each letter following a space is automatically in upper case.

**Making calls****Making an external call**

- ▶ ... Enter the number ▶ Press the Talk key  **briefly**
- or ▶ Press and **hold** the Talk key  ▶ ... enter number
- Cancel dialling: ▶ Press the End call key 

**Dialling from the phonebook**

- ▶ ... open the phonebook with  ▶ ... select entry with  ▶ press the Talk key 





**Dialling from the redial list**

The redial list contains the 10 numbers last dialled with the handset.

- ▶ Press the Talk key  **briefly** ... Redial list is opened ▶ ... select entry with  ▶ press the Talk key 

**Managing entries in the redial list**

- ▶ Press the Talk key  **briefly** ... Redial list is opened ▶ ... select entry with  ▶ **Menu** ... then

- Copy the number to the display: ▶  **Use Number** ▶ **OK**
- Copy the entry to the phonebook ( → page 14): ▶  **Copy to Directory** ▶ **OK**
- Delete the selected entry: ▶  **Delete Entry** ▶ **OK**
- Delete all entries: ▶  **Delete List** ▶ **OK**




The numbers can be edited or added here.

**Dialling from the call list**

The call list ( → page 14) contains the last 25 numbers for all calls or for only missed (not received) calls, depending on the type of list set.

- ▶ Press the Message key  ▶  **Calls List**: ▶ **OK** ▶ ... select entry with  ▶ press the Talk key 

## Accepting a call

- Accepting a call: ▶ Press the Talk key 
- or if **Auto Answer** is activated ( → page 22):
- ▶ ... Remove the handset from the charging cradle

**Accepting a call on the Gigaset L410 handsfree clip:** ▶ Press the Talk key  on the L410



The L410 must be registered to the base, see Gigaset L410 user guide.

## Caller display

### Calling Line Identification

The caller's telephone number is displayed. If the caller's number is saved in the phonebook, the name is displayed.

### No Calling Line Identification

Instead of name and number, the following is displayed:

- **External Call:** No number has been transferred
- **Withheld:** Caller has withheld Calling Line Identification
- **Unavailable:** Caller has not requested Calling Line Identification



By default, the number of the caller is shown on your telephone.

## Receiving call waiting during an external call

 
 
If the function is activated, during an **external** call you will hear a call waiting tone to signal that another external caller is trying to get through. If you have CLIP the number of the waiting caller or the corresponding directory entry is shown in the display.

## Handsfree mode



Activating/deactivating handsfree mode during a call and when establishing a connection:

- ▶ Press the Talk key .

Placing the handset in the charging cradle during a call:


- ▶ Press and hold down the Talk key  ▶ ... Place the handset in the charging cradle ▶ ... hold down  for a further 2 seconds

## Call volume

- Accessing the settings **during a call** for the mode currently in use (handsfree, earpiece):
  - ▶ Control key  ▶ ... set volume with  ▶ OK



The setting is automatically stored after around 2 seconds, even if OK is not pressed.

- Accessing the settings **via the menu**:
  - ▶ Menu ▶  Settings ▶ OK ▶  Audio Settings ▶ OK ▶ Call Volume ▶ OK ▶ ... then
- Handset volume: ▶ Earpiece Volume ▶ OK ▶ ... set volume with  ▶ OK (✓ Saved)
- Loudspeaker volume: ▶  Handsfree Volume ▶ OK ▶ ... set volume with  ▶ OK (✓ Saved)

## Mute microphone

When the microphone is deactivated during a conversation, the other caller cannot hear.

- Activating/deactivating the microphone: ▶ Press 

## Automatic network provider selection (Preselection)

A call-by-call number (preselection number) is **automatically** prefixed when dialling, e. g. for international calls via a special network provider.

In the **"With Preselect"** list, the area code or the first digits of the area codes are entered, for which the preselection number should be used.

In the **"Without Preselect."** list, the exceptions to the **"With Preselect"** list are entered.

Example:

Preselect. Number	0999
With Preselect	08
Without Preselect.	081 084

All numbers beginning with **08**, with the exception of **081** and **084**, are dialled using preselection number **0999**.

Number	Selected number
07112345678	▶ 07112345678
<b>08912345678</b>	▶ <b>0999 08912345678</b>
<b>08412345678</b>	▶ 08412345678


Entering the preselection number and the numbers into the lists:


 
- ▶ Menu ▶  Settings ▶ OK ▶  Telephony ▶ OK ▶  Preselection ▶ OK ▶ Presel. Number ▶ OK ▶ ... enter number with Del. and  OK (✓ Saved)

To deactivate preselection permanently, delete the preselection number using the display key **Del**.

### Cancelling of preselection for the current call

- ▶ Hold down the Talk key  ▶ Menu ▶  Preselect off ▶ OK ▶ ... then

- ▶ ... enter the number with 

or ▶ ... copy the number from the phonebook with  ▶ press the Talk key 

Entering the preselection number:

- ▶ Menu ▶  Settings ▶ OK ▶  Telephony ▶ OK ▶  Preselection ▶ OK ▶ Presel. Number ▶ OK ▶ Enter number ▶ ... with  ▶ OK (✓ Saved)

Entering the numbers to be dialled with preselection in the **"With Preselect"** list:



- ▶ Menu ▶  Settings ▶ OK ▶  Telephony ▶ OK ▶  Preselection ▶ OK ▶  With Preselect ▶ OK ▶ 1: --- ▶ OK ▶ Enter number ▶ ... with  ▶ OK (✓ Saved)

 
Entering the numbers to be dialled without preselection in the **"Without Preselect."** list:


 
- ▶ Menu ▶  Settings ▶ OK ▶  Telephony ▶ OK ▶  Preselection ▶ OK ▶  Without Preselect. ▶ OK ▶ 1: --- ▶ OK ▶ Enter number ▶ ... with  ▶ OK (✓ Saved)

To deactivate preselection permanently, delete the preselection number using the display key **Del**.

### Cancelling of preselection for the current call

- ▶ Hold down the Talk key  ▶ Menu ▶  Preselect off ▶ OK ▶ ... then

- ▶ ... enter the number with 

or ▶ ... copy the number from the phonebook with  ▶ press the Talk key 

## Network mailbox



To be able to use the network mailbox, it must be **requested** from the network provider and the number must be stored in the telephone: ▶ **Menu** ▶ **Voice Mail** ▶ **OK** ▶ **Net Mailbox** ▶ **OK** ▶ ... enter the network mailbox number with ▶ **OK**

### Playing back messages

- Using the Message key: ▶ **Message key** ▶ **Net Mailbox** ▶ **OK**
- or using the menu: ▶ **Menu** ▶ **Voice Mail** ▶ **OK** ▶ **Play Messages** ▶ **OK**
- or using the menu: ▶ **Menu** ▶ **Voice Mail** ▶ **OK** ▶ **Play Messages** ▶ **OK** ▶ **Net Mailbox** ▶ **OK**
- or using the key : ▶ **Hold down key** ... the network mailbox is called directly





Answer machine is assigned to key : ▶ **Menu** ▶ **Voice Mail** ▶ **OK** ▶ **Set Key 1** ▶ **OK** ▶ **Net Mailbox** ▶ **OK** ( = selected)



# Messages

## Message lists

Incoming messages are saved in the message lists. An advisory tone sounds as soon as a **new entry** appears on a list. The Message key also flashes (if activated, → page 13). Icons for message types and the number of new messages are shown on the idle display:


-  on the network mailbox (→ page 12)
-  in the call list (→ page 14).

### Opening message lists

- ▶ Press the Message key  ▶ ... select message list with :
  - **Net. MBX:** Network mailbox (→ page 12)
  - **CallsList:** Call list (→ page 14)
- ▶ ... Open selected message list with **OK**


 
 


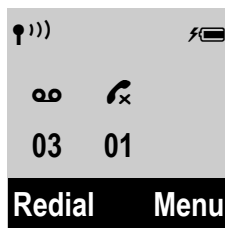

- If **new** messages are available, only lists with new messages are displayed.
- The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.
- If you select the **network mailbox**, the network mailbox number will be selected (→ page 12). Lists are not opened on the display.

Example




 
 
## Flashing message key

Receipt of new messages is displayed by a flashing message key on the handset. This type of alert can be activated/deactivated.

- ▶ **Menu** ▶       ... the number 9 appears on the display ▶ ... select the message type with :

- Messages on the network mailbox ▶  
- Missed calls ▶  

... the number 9 followed by the entry (e.g. 975) is displayed, the current setting flashes in the entry field (e.g. 0) ▶ ... customise for new messages with :

- The Message key flashes ▶ 
- The Message key does not flash ▶ 
- ▶ ... confirm desired setting with **OK**


## Call lists

The call list contains the last 25 numbers for all calls or for only missed (not received) calls, depending on the type of list set.

The following information is displayed in the list entries:

- Entry status:
  - **New Call:** New missed call.
  - **Old Call:** Entry already read.
  - **Answ.:** Call was accepted.
- Caller's number. If the number is saved in the phonebook, the name is displayed instead.
- Date and time of call (if set).

Example

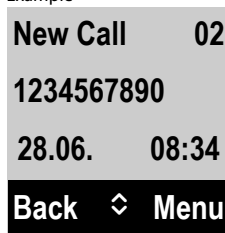


### Setting the list type

- ▶ Menu ▶ Settings ▶ OK ▶ Telephony ▶ OK ▶ Calls List Type ▶ OK ... then
  - Select missed calls: ▶ Missed Calls ▶ OK  = selected)
  - Select all calls: ▶ All Calls ▶ OK  = selected)

### Opening the call list

- ▶ Message key ▶ CallsList ... the list with the number of new entries (1) and the number of old (read) entries (2) is displayed ▶ OK

Example

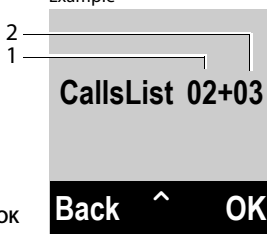

### Calling back a caller from the call list

- ▶ Press the Talk key

### Additional options

- ▶ Menu ... then
  - Copy an entry to the phonebook ( → page 14): ▶ Copy to Dir. ▶ OK
  - Delete the selected entry: ▶ Delete Entry ▶ OK
  - Delete all entries: ▶ Delete List ▶ OK

## Phonebook (Address book)

A name and number is stored in a **phonebook entry** (entering of numbers/letters/characters → page 9).

	Number of entries	up to 150
	Length of entries	numbers: max. 32 digits names: max. 16 characters

- A special background colour and caller melody can be assigned to each entry ( → page 15).
- The phonebook is created individually for each handset. The whole phonebook or individual entries, however, can be copied to other handsets ( → page 16).
- Sort order:  
Space | Digits (0-9) | Letters (alphabetical) | Other characters






### Opening phonebook

- ▶ Press in idle status








## Phonebook entries

### Creating an entry

- ▶  ... then
  - Storing the **first entry** in the phonebook:
    - ▶ **Dir. empty New Entry?** ▶ OK ▶ ... enter number with  ▶ OK ▶ ... enter name with  ▶ OK
  - Storing an **additional entry** in the phonebook:
    - ▶ **Menu** ▶ **New Entry** ▶ OK ▶ ... enter number with  ▶ OK ▶ ... enter name with  ▶ OK

### Selecting an entry


- ▶  ▶ ... enter the first few letters with  ... the display skips to the first name that begins with these letters ▶ ... scroll to the desired entry with  if necessary







-  Scrolling continuously upwards or downwards in the phonebook:
  - ▶ **Hold down** 

### Changing an entry






- ▶  ▶ ... select the desired entry with  ▶ **Menu** ▶  **Edit Entry** ▶ OK ▶ ... edit the number with  ▶ OK ▶ ... edit the name with  ▶ OK


### Marking an entry as VIP

A **VIP Caller Melody** and/or a **VIP Caller Colour** can be assigned to each entry. The entry is displayed in the phonebook in this colour with the icon .

- ▶  ▶ ... select the desired entry with  ▶ **Menu** ▶ ... then
  - Melody: ▶  **VIP Caller Melody** ▶ OK ▶ ... select the desired melody with  ▶ OK
  - Colour: ▶  **VIP Caller Colour** ▶ OK ▶ ... select the desired colour with  ▶ OK

### Editing/adding call number

- ▶  ▶ ... select the desired entry with  ▶ **Menu** ▶  **Use Number** ▶ OK ... number appears in the display ▶ ... **edit/add number** with  ▶ ... select number with 

-  The number on the display can be copied to the phonebook:
  - ▶ **Menu** ▶ **Copy to Directory** ▶ OK

### Deleting an entry






- ▶  ▶ ... select the desired entry with  ▶ **Menu** ▶  **Delete Entry** ▶ OK

### Deleting all phonebook entries

- ▶  ▶ **Menu** ▶  **Delete List** ▶ OK ▶ **Delete?** ▶ OK

## Quick dial keys

Entries from the phonebook can be allocated to keys 0 and 2 to 9:

- ▶  ▶ ... select the desired entry with  ▶ **Menu** ▶  **Shortcut** ▶ OK ... then
  - ▶ ... press the desired key with 
- or
  - ▶ ... select the desired key with  ▶ OK

**Dialling:** ▶ ... **hold down** the corresponding quick dial key in idle status

## Copying an entry/phonebook

The entire phonebook or individual entries can be copied.



- The sending and receiving handset must both be registered to the same base.
- The other handset and the base can send and receive phonebook entries.



- An external call interrupts the transfer.
- **VIP Caller Melody** and **VIP Caller Colour** are not copied.
- Entries with numbers already stored are discarded.

### Copying individual entries

▶ ▶ ... select the desired entry with ▶ **Menu** ▶ **Send Entry** ▶ **OK** ▶ ... select the recipient handset with ▶ **OK** ... after successful transfer, **Entry copied. Next entry?** is displayed ... then

- If **one** additional entry must be sent: ▶ **OK**
- If **no** additional entries must be sent: ▶ **Back**

### Copying the entire phonebook

▶ ▶ **Menu** ▶ **Send List** ▶ **OK** ▶ ... select the recipient handset with ▶ **OK**

## Copying numbers to the phonebook

Copying numbers to the phonebook that are displayed in a call list or the redial list, and numbers that have already been entered to dial:



A number is shown on the display.

▶ **Menu** ▶ **Copy to Directory** ▶ **OK** ▶ ... confirm number with **OK** ▶ ... where necessary add name ▶ **OK**

## Additional functions

### Alarm clock

An alarm call is signalled on the display and with the selected volume and melody (→ page 21) for a maximum of 60 seconds. During a call, the alarm is only indicated by a short tone.



Date and time are set (→ page 7).

#### Activating the alarm clock

▶ **Menu** ▶ **Alarm Clock** ▶ **OK** ▶ **Activation** ▶ **OK** ( = activated) ▶ ... select the wake-up time in hours and minutes with ▶ **OK** (✓ **Saved**)

When the alarm clock is activated, the icon and the wake-up time is displayed in idle display.

#### Deactivating the alarm clock

▶ **Menu** ▶ **Alarm Clock** ▶ **OK** ▶ **Activation** ▶ **OK** ( = deactivated)

#### Setting the wake-up time

▶ **Menu** ▶ **Alarm Clock** ▶ **OK** ▶ **Wake up time** ▶ **OK** ▶ **Time:** ▶ ... enter the wake-up time in hours and minutes with ▶ **OK** (✓ **Saved**)

## Deactivating alarm/snooze mode



An alarm call sounds.

- Deactivate until the next alarm call:      ▶ Press **Off**
- Snooze mode:                                      ▶ Press **Snooze** or press any key ... the alarm call will be deactivated and repeated 5 minutes later



- If no key is pressed, the alarm call deactivates itself after 60 seconds and is repeated 5 minutes later.
- After the second repetition, the alarm call is deactivated for 24 hours.

## ECO DECT



The device range is set to maximum as default. This guarantees optimum wireless management. The handset will not function in idle status, as it is not transmitting (**No Radiation**). Only the base will maintain contact with the handset via a low wireless signal. During a call, the transmission power automatically adapts to the distance between the base and handset. The smaller the distance to the base, the lower the radiation.

To reduce the radiation further:

### Reducing radiation by up to 80%

- ▶ Menu ▶ Settings ▶ OK ▶ System ▶ OK ▶ ECO DECT ▶ OK ▶ Max. Range ▶ OK  
( = deactivated)



- The range is also reduced with this setting.
- A repeater to increase the range cannot be used.

### Deactivating radiation in idle status

- ▶ Menu ▶ Settings ▶ OK ▶ System ▶ OK ▶ ECO DECT ▶ OK ▶ No Radiation ▶ OK ( = deactivated)



- To benefit from the advantages of the setting **No Radiation**, all registered handsets must support this feature.
- If the setting **No Radiation** is activated and a handset is registered to the base that does not support this feature, **No Radiation** is automatically deactivated. As soon as this handset is de-registered, **No Radiation** will automatically be re-activated.
- The wireless connection will only be established for an incoming or outgoing call and the connection will be delayed by about 2 seconds.
- So that a handset can establish a wireless connection with the base more quickly for an incoming call, it must "listen" to the base more often, i.e. scan the environment. This increases power usage and reduces the standby and talktime of the handset.
- When No Radiation is activated, there will be no range display/range alarm on the handset. Contactability can be tested by attempting to establish a connection.
  - ▶ **Hold** down the Talk key ... the ringing tone sounds.
- For additional information, see the website [www.gigaset.com](http://www.gigaset.com).

# Expanding the functionality of the telephone

## Multiple handsets

Upgrade the telephone to a cordless PABX.

Information regarding additional handsets can be found at [www.gigaset.com](http://www.gigaset.com).

### Compatibility

The main functions of device combinations between base and different handsets are available at:

[www.gigaset.com/compatibility](http://www.gigaset.com/compatibility)

## Registering

A total of up to four handsets can be registered to the base.



- Handset registration must be initiated on the base **and** on the handset.
- Both must be carried out **within 60 secs.**

On the base: ▶ **Hold** down (min. 3 seconds) the registration/paging key  
(→ page 1) ...

and on the A540 handset: ▶ **Menu** ▶ **Settings** ▶ **OK** ▶ **Registration** ▶ **OK** ▶ **Register Handset** ▶ **OK** ▶ ... enter system PIN if necessary (default setting: 0000) ▶ **OK**

The connection to the base is established; this may take some time.



- The handsets are automatically assigned names "INT 1", "INT 2" etc. Each handset will automatically be assigned the lowest unassigned number (1-4). Successful registration is shown on the display.
- If four handsets are already registered to the base (all internal numbers assigned), the handset with the internal number 4 will be replaced with the new one. If this is not possible, because a conversation is being held on this handset for example, the message **No free Internal Number** is given. In this case, another handset that is no longer required should be de-registered and the registration process should be repeated.
- For **other Gigaset handsets** and handsets with GAP functionality: register the handset in accordance with the relevant user guide.

## De-registering

▶ **Menu** ▶ **Settings** ▶ **OK** ▶ **Registration** ▶ **OK** ▶ **De-register Handset** ▶ **OK** ... the handset used is selected ▶ ... select another handset if necessary with ▶ **OK** ▶ ... if necessary enter the system PIN (default setting: 0000) ▶ **OK** ▶ (✓ **Saved**)

## Locating a handset ("Paging")

▶ **Briefly** press the registration/paging key on the base (→ page 1) ... all handsets ring at the same time ("paging"), even if the ringtone is deactivated

### Ending the search

On the base: ▶ Press the registration/paging key again **briefly**




or on the handset: ▶ Press the Talk key or End call key




After approx. 3 minutes, the paging call will end **automatically**.




## Making internal calls

### Calling a specific handset

▶ Briefly press  ... the list of handsets opens ▶ ... select the handset with  ▶ ... press the Talk key 

### Calling all handsets (group call)

▶ Hold down 


 
or ▶ Briefly press  ... the list of handsets is opened ▶ ... select **Call All** with  ▶ press the Talk key 



- Internal calls to other handsets are free of charge.
- Your own handset is not displayed.
- If only one other handset is registered, this handset is called immediately.

## Internal consultation/internal transfer


You receive a call from an **external** participant and would like to transfer the call to an **internal** participant or wish to consult him/her.

▶  ... list of handsets is opened ▶ ... select a specific handset or **Call All** ▶ Press **OK** or press the Talk key 

### Holding a consultation call

Returning to the external call: ▶ **Back**

### Transferring an external call

Before and after the called participant answers: ▶ Press the End call key 






- If the called participant does not answer or does not want to accept the call:  
▶ End the consultation call with **Back**


## Listening in to an external call

An internal participant can listen in to an external call and take part in the conversation (conference).




The function **Listening in** is activated:

▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Telephony** ▶ **OK** ▶  **Listening in** ▶ **OK** (☑ = activated)

▶ Hold down the Talk key  ... all participants hear a signal tone

### Ending listening in

▶ Press the End call key  ... all participants hear a signal tone

## Repeater




A Gigaset repeater increases the receiving range between the Gigaset handset and the base.

### Setting up the repeater

ECO DECT settings: ▶ Activate **Max. Range** (→ page 17)

and ▶ Deactivate **No Radiation** (→ page 17)

and activating the repeater on the handset:

▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **System** ▶ **OK** ▶  **Repeater** ▶ **OK** ▶ **Change setting?** ▶ **OK** (☑ = activated)

and registering the repeater to the base:

▶ Hold down the registration/paging key (min. 3 sec.) (→ page 1) ▶ ... Connect the repeater power adapter to a power socket ... the repeater is automatically registered to the base. The repeater LEDs will indicate whether registration was successful or unsuccessful.

For additional information, see the website [www.gigaset.com/gigasetrepeater](http://www.gigaset.com/gigasetrepeater).

## Operation with router

When operating on the analogue connection of a router, potentially occurring **echoes** can be reduced by activating XES mode<sup>1</sup>.

▶ Menu ▶ Settings ▶ OK ▶ System ▶ OK ▶ XES Mode ▶ OK (☑ = activated)



If there are no problems with echoes, the XES mode should be deactivated (default setting).

## Operating a PABX

Some settings are usually required for operation behind a PABX; see PABX user guide.

▶ Menu ▶ ... the number 9 appears on the display ▶ ... with select:

- **Dialling mode:**
  - ▶ 8 ▶ 0 = tone dialling (DTMF) ▶ OK
  - or ▶ 1 = pulse dialling (PD) ▶ OK
- **Flash time:**
  - ▶ 1 0 ▶ 0 = 80 ms ▶ OK
  - or ▶ 2 = 120 ms ▶ OK
  - or ▶ 4 = 250 ms ▶ OK
  - or ▶ 6 = 600 ms ▶ OK
  - or ▶ 1 = 100 ms ▶ OK
  - or ▶ 3 = 400 ms ▶ OK
  - or ▶ 5 = 300 ms ▶ OK
  - or ▶ 7 = 800 ms ▶ OK
- **Pause after line seizure:**
  - ▶ 1 6 ▶ 1 = 1 sec ▶ OK
  - or ▶ 3 = 7 sec ▶ OK
  - or ▶ 2 = 3 sec ▶ OK
- **Pause after Recall key:**
  - ▶ 1 2 ▶ 1 = 800 ms ▶ OK
  - or ▶ 3 = 3200 ms ▶ OK
  - or ▶ 2 = 1600 ▶ OK



The number of the current setting flashes.

### Entering a dialling pause when dialling

▶ Hold down the redial key ... a P appears on the display

### Switching temporarily from pulse dialling (PD) to tone dialling (DTMF)

After dialling the external number or after establishing the connection:

▶ Press the star key **briefly**

<sup>1</sup> XES stands for "eXtended Echo Suppression"

# Adjusting the telephone settings

## Display

### Language

Different languages are available for the display.

▶ Menu ▶ Settings ▶ OK ▶ Language ▶ OK ▶ ... select language with ▶ OK (☑ = selected)

### Screensaver

A digital clock can be set as a screensaver.

▶ Menu ▶ Settings ▶ OK ▶ Display ▶ OK ▶ Screensaver ▶ OK ▶ ... select No Screensaver / Digital Clock with ▶ OK (☑ = selected)



Changing from screensaver to idle display: ▶ briefly press the End call key

### Colour scheme

The display background can be set to 4 different colours.

▶ Menu ▶ Settings ▶ OK ▶ Display ▶ OK ▶ Colour Schemes ▶ OK ▶ ... select Col. Scheme 1...4 with ▶ OK (☑ = selected)

### Contrast

The display contrast can be set to 9 different levels.

▶ Menu ▶ Settings ▶ OK ▶ Display ▶ OK ▶ Contrast ▶ OK ▶ ... select Level: 1...9 with ▶ OK (☑ = selected)

## Ringtones

Basic ringtone setting.

Activate/deactivate ringtone **permanently**: ▶ Hold down the star key



Deactivating the ringtone **for the current call**: ▶ Menu ▶ Silent ▶ OK

### Ringtone volume

▶ Menu ▶ Settings ▶ OK ▶ Audio Settings ▶ OK ▶ Ringer Volume ▶ OK ▶ ... set the ringtone volume with ▶ OK (✓ Saved)



The volume is the same for all types of signalling.

### Ringtone melody

The ringtone melody can be set separately for external calls, internal calls and the alarm clock.

▶ Menu ▶ Settings ▶ OK ▶ Audio Settings ▶ OK ▶ Ringtones (Handset) ▶ OK ... then

- External calls: ▶ External Calls ▶ OK ▶ Melodies ▶ OK
- Internal calls: ▶ Internal Calls ▶ OK
- Alarm clock: ▶ Alarm Clock ▶ OK
- ▶ ... select the ringtone melody with ▶ OK (☑ = selected)

---

## Advisory tones/battery warning tone

The handset notifies acoustically about different activities and statuses. The tones can be activated/deactivated independently of one another.

- ▶ **Menu** ▶ **Settings** ▶ **OK** ▶ **Audio Settings** ▶ **OK** ... then
- **Advisory Tones:** ▶ ... select **Advisory Tones** with ▶ **OK** ( = activated)
- **Battery Low:** ▶ ... select **Battery Low** with ▶ **OK** ( = activated)

---

## Music on hold

Music on hold that is played to external callers during an internal consultation call and forwarding can be activated or deactivated.

- ▶ **Menu** ▶ \*#\*#0\*5\*#\*1\*7\* ... the current setting flashes in the entry field (e.g. 0) ▶ ... enter digits with :
- **Deactivate:** ▶  ▶ **OK** (✓ **Saved**)
- **Activate:** ▶  ▶ **OK** (✓ **Saved**)

---

## Auto Answer

A call is accepted as soon as the handset is lifted from the charging cradle.

- ▶ **Menu** ▶ **Settings** ▶ **OK** ▶ **Telephony** ▶ **OK** ▶ **Auto Answer** ▶ **OK** ( = activated)

---

## Protection against unwanted calls

### Time control for external calls

The telephone does not ring during a specified time period.

- ▶ **Menu** ▶ **Settings** ▶ **OK** ▶ **Audio Settings** ▶ **OK** ▶ **Ringtones (Handset)** ▶ **OK** ▶ **External Calls** ▶ **OK** ▶ **Time Control** ▶ **OK** ▶ **Activation** ▶ **OK** ( = activated) ... set or edit the time period: ▶ **Settings** ▶ **OK** ▶ **Ringer off from** ... enter start ▶ **OK** ▶ **Ringer off until** ... enter end ▶ **OK** (✓ **Saved**)



During this period, the handset will continue to ring for numbers to which a VIP ringtone is assigned in the phonebook.

---

### No ringing for anonymous calls

The handset does not ring for anonymous calls (the caller has actively withheld Calling Line Identification).

- ▶ **Menu** ▶ **Settings** ▶ **OK** ▶ **Audio Settings** ▶ **OK** ▶ **Ringtones (Handset)** ▶ **OK** ▶ **External Calls** ▶ **OK** ▶ **Anonymous Calls Silent** ▶ **OK** ( = activated)



- The setting only applies to handset for which the setting is configured.
- The call is only signalled on the display.




## System PIN

### Changing the system PIN

- ▶ Menu ▶  Settings ▶ OK ▶  System ▶ OK ▶  System PIN ▶ OK ▶ ... enter the current system PIN with  (default setting: 0000) ▶ OK ▶ ... enter new system PIN with  (4 digits; 0 - 9) ▶ OK

### Resetting the system PIN


The system PIN can be reset to **0000** at any time, if the PIN has been lost.

-  • All base settings are reset!
  - All handsets are de-registered!
- ▶ Remove the power cable from the base ▶ Hold down the registration/paging key on the base and simultaneously reconnect the power cable to the base ▶ Hold down the registration/paging key for at least another 5 seconds

## Telephone reset

The base and handset settings can be reset independently of one another.

- ▶ Menu ▶  Settings ▶ OK ▶  System ▶ OK ▶  Reset Handset/Base Reset ▶ OK ▶ ... Answer the security question with OK

-  • When resetting the handset (**Reset Handset**), audio and display settings will be deleted.
  - When resetting the base (**Base Reset**) ECO DECT and system settings are reset and call lists are deleted.
- The following are **not** affected:
- Date / time,
  - Registration of handsets to the base and the current selection of the base,
  - System PIN,
  - Entries in phonebook,
  - Redial list.

# Manufacturer's advice

## Customer Service & Assistance

Step by step towards your solution with Gigaset Customer Care

[www.gigaset.com/service](http://www.gigaset.com/service)



**Visit our Customer Care pages:**

[www.gigaset.com/service](http://www.gigaset.com/service)

Here you will find:

- Frequently asked questions
- Free software and user manual downloads
- Compatibility checks



**Contact our Customer Care staff:**

Couldn't find a solution in the FAQs section?

We are happy to help...

... by eMail: [www.gigaset.com/contact](http://www.gigaset.com/contact)

... by telephone:

**Service Greece +30 2111 98 1778**

(0,026 € per minute from the Greek phone network. For calls from mobile phone networks, other prices may apply.)

Please have your proof of purchase ready when calling.

Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product).

In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased.

## Authorisation

This device is intended for analogue phone lines in the Greek telephone net.

Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

The EC declaration of your country according to 1999/5/EC can be found at:

[www.gigaset.com/docs](http://www.gigaset.com/docs).

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.


 
CE 0682

## Questions and answers

Suggested solutions are available on our website at [www.gigaset.com/service](http://www.gigaset.com/service)

The table below also lists steps for troubleshooting.

**The display is blank.**

- The handset is not switched on: ▶ **Hold** down the End call key .
- The battery is empty: ▶ Charge the battery or replace it (→ page 6).
- The key and display lock is activated: ▶ **Hold** down the hash key .

**"Base" flashes on the display.**

- The handset is outside the range of the base: ▶ Move the handset closer to the base.
- The base is not switched on: ▶ Check the base power adapter.
- The base's range has decreased because **Max. Range** is deactivated: ▶ Activate **Max. Range** (→ page 17) or ▶ reduce the distance from handset to base.

**"Register handset" or "Place handset into base" flashes on the display.**

- The handset has not yet been registered or was de-registered due to the registration of an additional handset (more than 4 DECT registrations): ▶ Register the handset again (→ page 7, → page 18).

**The handset does not ring.**

- The ringtone is deactivated: ▶ Activate ringtone (→ page 21).
- The phone does not ring if the caller has withheld his/her number: ▶ Activate the ringtone for anonymous calls (→ page 22).
- The telephone does not ring during a specific time period: ▶ Check the time control for external calls (→ page 22).

**No ringtone/dial tone from the fixed line network.**

- The telephone cable supplied has not been used or has been replaced by a new cable with the wrong pin connections: ▶ Please always use the telephone cord supplied or ensure that the pin connections are correct when purchasing from a retailer (→ page 29).

**The connection always terminates after approx. 30 seconds.**

- A repeater (earlier than version 2.0) has been activated or deactivated (→ page 19): ▶ Switch the handset off and back on again (→ page 8).

**Error tone sounds after system PIN prompt.**

- The system PIN you have entered is incorrect: ▶ Repeat the procedure, reset the system PIN to 0000 if necessary (→ page 23).

**Forgotten system PIN.**

- ▶ Reset the system PIN to 0000 (→ page 23).

**The other caller cannot hear you.**

- The handset is "muted": ▶ Reactivate the microphone (→ page 11).

**The caller's number is not displayed.**

- **Calling Line Identification (CLI)** is not approved for the caller: ▶ **Caller** should ask the network provider to enable Calling Line Identification (CLI).
- **Calling Line Identification Presentation (CLIP)** is not supported or approved by the network provider: ▶ Caller display (CLIP) must be enabled by the network provider.
- The telephone is connected via a PABX or a router with an integrated PABX (gateway) that does not transmit all information:
  - ▶ Reset the system: Briefly pull out the power plug. Reinsert the plug and wait until the device restarts.
  - ▶ Check the settings on the PABX and activate telephone number display, if necessary. To do this, search for terms such as CLIP, calling line identification, telephone number identification, caller ID, etc. in the user guide of the system or ask the system manufacturer.

### Error tone with keypad entries.

- Action has failed/invalid input: ▶ Repeat the procedure ... Read the display and refer to the user guide if necessary.

### The messages on the network mailbox cannot be listened.

- The PABX is set to pulse dialling: ▶ Set the PABX to tone dialling ( → page 20).

---

## Guarantee Certificate

Without prejudice to any claim the user (customer) may have in relation to the dealer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (e.g., batteries, keypads, casings), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the equipment defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- This Guarantee shall not extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- This Guarantee shall apply to new devices purchased in the European Union. The Guarantee is issued by Gigaset Communications Austria GmbH, Businesspark Marximum Objekt 2 / 3.Stock, Modecenterstraße 17, 1110 Vienna, Austria.
- Any claims that differ from or extend beyond these mentioned in this manufacturer's warranty shall be excluded, except from cases expressly specified in the applicable law. (In no event shall Gigaset Communications be liable for any loss of business, profits or data, additional software loaded by the customer or other information. The customer shall also bear the responsibility for the creation of backup copies of their files. The limitation of liability shall not apply if and to the extent liability is mandatory under the applicable law, e.g. according to product liability law or in the event of intentional misconduct, severe negligence, personal injury, damage to parts of the human body or to personal health, or in case of violations of conventional obligations. However, the claims for damages related to violation of conventional obligations shall be limited to predictable damages, representative of such conventions, as long as there is no intention or severe negligence, personal injury, damage to parts of the human body or to personal health, according to the product liability law.)
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- The above provisions do not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications telephone service. The relevant number is to be found in the accompanying user guide.

## Environment

### Our environmental statement

We at Gigaset Communications GmbH are aware of our social responsibility. That is why we actively take steps to create a better world. In all areas of our business – from product planning and production to sales and waste of disposal – following our environmental conscience in everything we do is of utmost importance to us.

Learn more about our earth-friendly products and processes online at [www.gigaset.com](http://www.gigaset.com).

### Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

**ISO 14001 (Environment):** Certified since September 2007 by TÜV SÜD Management Service GmbH.

**ISO 9001 (Quality):** Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

### Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.



If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority or your refuse collection service.

## Appendix

### Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

**Never** use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

### Contact with liquid



If the device comes into contact with liquid:

1. Disconnect the power supply.
2. Remove the batteries and leave the battery compartment open.
3. Allow the liquid to drain from the device.
4. Pat all parts dry.
5. Place the device in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)** with the battery compartment open and the keypad facing down (if applicable).
6. Do not switch on the device again until it is completely dry.

When it has fully dried out, you will normally be able to use it again.

## Technical data

### Batteries

Technology:	2 x AAA NiMH
Voltage:	1.2 V
Capacity:	400 mAh

### Handset operating times/charging times

The operating time of the telephone depends on the capacity of the battery, its age and the way it is used. (All times are maximum possible times).

Standby time (hours) *	200 * / 110 **
Talktime (hours)	18
Operating time for 1.5 hours of calls per day (hours) *	90 * / 65 **
Charging time in base (hours)	4
Charging time in charging cradle (hours)	4

\* **No Radiation** deactivated, **without** display backlight in idle status

\*\* **No Radiation** activated, **without** display backlight in idle status

### Base power consumption

In standby mode


- Handset in charging cradle approx. 0.6 W
- Handset outside charging cradle approx. 0.55 W

During a call approx. 0.65 W

### General specifications

DECT standard	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1900 MHz
Duplex method	Time division multiplexing, 10 ms frame length
Repetition frequency of the transmission pulse	100 Hz
Duration of the transmission pulse	370 µs
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW average power per channel, 250 mW pulse power
Range	Up to 50 m indoors, up to 300 m outdoors
Base power supply	230 V ~/50 Hz
Environmental conditions for operation	+5°C to +45°C, 20% to 75% relative humidity
Dialling mode	DTMF (tone dialling)/PD (pulse dialling)

## Pin connections on the telephone jack

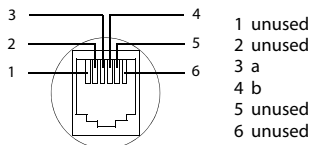

## Character charts

### Standard characters

Press the relevant key the number of times indicated.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x	15x	16x
1 =	1	£	§	¥	¤											
2 =	a	b	c	2	ä	á	à	â	ã	ç						
3 =	d	e	f	3	ë	é	è	ê								
4 =	g	h	i	4	ï	í	ì	î								
5 =	j	k	l	5												
6 =	m	n	o	6	ö	ñ	ó	ò	ô	õ						
7 =	p	q	r	s	7	ß										
8 =	t	u	v	8	ü	ú	ù	û								
9 =	w	x	y	z	9	ÿ	ý	æ	ø	å						
0 =	␣	.	,	?	!	0	+	-	:	¿	¡	"	'	;	_	
* =	*	/	(	)	<	=	>	%								
# =			#	@	\	&	§									

1) Space

### Greek

Press the relevant key the number of times indicated.




	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x
1 =	1	§	¤											
2 =	α	β	ά	2	a	b	c							
3 =	δ	ε	φ	έ	3	d	e	f						
4 =	γ	η	ι	ή	ί	ϊ	ĩ	4	g	h	i			
5 =	κ	λ	5	j	k	l								
6 =	μ	v	o	ω	ó	ώ	6	m	n	o				
7 =	π	ρ	ç	σ	ψ	7	p	q	r	s				
8 =	θ	τ	8	t	u	v								
9 =	ζ	ξ	u	χ	ú	ü	ü	9	w	x	y	z		
0 =	␣	.	,	?	!	0	+	-	:	"	'	;	_	
* =	*	/	(	)	<	=	>	%						
# =			#	@	\	&	§							





 
1) Space

## Display icons

 
 

The following icons are displayed depending on the settings and the operating status of the telephone.




### Icons in the status bar

Icon	Meaning
	Signal strength (No Radiation is deactivated)
	No connection to the base
	No Radiation is activated.




Icon	Meaning
	Ringtone deactivated
	Keypad lock activated
	Battery charge status: charged under 11% to over 66%
	flashes: battery almost empty (approx. 5 minutes talktime remaining)
	Battery is charging Current charge status: 0% to 100%



### Display icons for signalling of ...

Icon	Meaning
	Establishing a call (outgoing call)
	Connection established
	No connection established/connection terminated

Icon	Meaning
	External call
	Internal call
	Alarm call

### Other display icons

Icon	Meaning
	Information
	(Security) prompt
	Please wait...

Icon	Meaning
	Action complete
	Action failed



# Index

- A**
- Activating/deactivating message LED . . . . . 13
  - Activating/deactivating microphone (handset) . 11
  - Address book, see Phonebook
  - Advisory tones . . . . . 22
  - Alarm clock . . . . . 16
  - Anonymous . . . . . 10
  - Anonymous calls . . . . . 22
  - Authorisation . . . . . 24
  - Auto Answer . . . . . 22
  - Automatic network provider selection . . . . . 11
- B**
- Base
    - changing system PIN . . . . . 23
    - connecting to power/telephone network . . . 5
    - restoring to default setting . . . . . 23
  - Battery
    - charging . . . . . 6
    - charging status . . . . . 30
    - inserting . . . . . 6
  - Battery warning tone . . . . . 22
  - Broken display . . . . . 4
- C**
- Call
    - accepting . . . . . 10
    - accepting automatically . . . . . 22
    - external . . . . . 9
    - internal . . . . . 19
    - participant listening in . . . . . 19
    - transferring internally (connecting) . . . . 19
  - Call lists . . . . . 14
  - Call protection . . . . . 22
  - Call waiting
    - external call . . . . . 10
  - Caller melody . . . . . 14
  - Calling
    - external . . . . . 9
    - internal . . . . . 19
  - Calling Line Identification . . . . . 10
  - Care . . . . . 27
  - Care of the device . . . . . 27
  - Changing
    - display language . . . . . 7
  - Changing the PIN . . . . . 23
  - Character charts . . . . . 29
  - Charge status of the batteries . . . . . 30
  - Charging time of handset . . . . . 28
  - Colour scheme . . . . . 21
- Connecting the base
    - to the PABX . . . . . 18
    - to the router . . . . . 18
  - Consultation call internally . . . . . 19
  - Contact with liquid . . . . . 27
  - Contents of the package . . . . . 5
  - Control key . . . . . 1, 8
  - Copying
    - entire phonebook to handset . . . . . 16
    - phonebook entry to handset . . . . . 16
  - Correcting incorrect entries . . . . . 9
  - Customer Care . . . . . 24
  - Customer Service & Assistance . . . . . 24
- D**
- Deactivating wireless module . . . . . 17
  - Default setting . . . . . 23
  - De-registering (handset) . . . . . 18
  - Dialling
    - from the call list . . . . . 9
    - using quick dial . . . . . 15
    - using the phonebook . . . . . 9
    - using the redial list . . . . . 9
  - Dialling mode . . . . . 20
  - Display
    - activating/deactivating new message . . . . 13
    - broken . . . . . 4
    - changing display language . . . . . 7
    - colour scheme . . . . . 21
    - network mailbox message . . . . . 12, 13
    - number (CLI/CLIP) . . . . . 10
    - screensaver . . . . . 21
  - Display icons . . . . . 30
  - Display keys . . . . . 8
  - display keys . . . . . 1
  - Disposal . . . . . 27
  - DTMF (tone dialling) . . . . . 20
- E**
- Earpiece volume . . . . . 10
  - Echo . . . . . 20
  - ECO DECT . . . . . 17
  - Emergency numbers
    - not possible . . . . . 4
  - End call key . . . . . 1, 9
  - Environment . . . . . 27
  - External . . . . . 10
  - External call
    - call waiting . . . . . 10
  - External calls
    - time control for ringtone . . . . . 22
    - transferring internally (connecting) . . . . 19

- 
- F**  
 Factory settings . . . . . 23
- 
- G**  
 Getting started . . . . . 5  
 Guarantee Certificate . . . . . 26
- 
- H**  
 Handset  
   advisory tones . . . . . 22  
   colour scheme . . . . . 21  
   de-registering the handset . . . . . 18  
   display language . . . . . 7  
   earpiece volume . . . . . 10  
   idle status . . . . . 9  
   muting . . . . . 11  
   paging . . . . . 18  
   registering . . . . . 7, 18  
   registering another handset . . . . . 18  
   restoring to default setting . . . . . 23  
   screensaver . . . . . 21  
   searching for . . . . . 18  
   setting . . . . . 21  
   setting up . . . . . 6  
   speaker volume . . . . . 10  
   switching on/off . . . . . 8  
   using multiple . . . . . 18  
 Handset reset . . . . . 23  
 Handsfree mode . . . . . 10  
 Handsfree volume . . . . . 10  
 Hash key . . . . . 1  
 Hearing  
   prevent loss of . . . . . 4  
 Hearing aids . . . . . 4  
 Help . . . . . 25
- 
- I**  
 Icons  
   alarm clock . . . . . 16  
   displaying new messages . . . . . 13  
   status bar . . . . . 30  
 Idle status, returning to . . . . . 9  
 Internal  
   listening in . . . . . 19  
   making calls . . . . . 19  
 Internal call . . . . . 19  
 Internal consultation call . . . . . 19
- 
- K**  
 Key 1 (fast access) . . . . . 1  
 Keys  
   control key . . . . . 1, 8  
   display keys . . . . . 1, 8  
   end call key . . . . . 1, 9  
   fast access . . . . . 1  
   hash key . . . . . 1  
   message key . . . . . 1  
   quick dial . . . . . 15  
   recall key . . . . . 1  
   star key . . . . . 1  
   talk key . . . . . 1
- 
- L**  
 Liquid . . . . . 27  
 List  
   accepted calls . . . . . 14  
   call lists . . . . . 14  
   missed calls . . . . . 14  
   outgoing calls . . . . . 14  
 List entry . . . . . 14  
 Listening in to an external call . . . . . 19  
 Locking/unlocking the keypad . . . . . 8  
 Loss of hearing . . . . . 4
- 
- M**  
 Making calls  
   accepting a call . . . . . 10  
   external . . . . . 9  
   internal . . . . . 19  
 Medical equipment . . . . . 4  
 Melody  
   ringtone for internal/external calls . . . . . 21  
 Message key . . . . . 1  
 Message lists . . . . . 9  
   opening . . . . . 13  
 Microphone . . . . . 1  
 Missed call . . . . . 14  
 Music on hold . . . . . 22  
 Muting the handset . . . . . 11
- 
- N**  
 Network mailbox . . . . . 12  
 Network provider selection, automatic . . . . . 11  
 Number  
   copying to the phonebook . . . . . 16  
   displaying caller's number (CLIP) . . . . . 10  
   saving in the phonebook . . . . . 15  
 Numbers  
   entering . . . . . 9

---

**O**

Operating time of handset . . . . . 28

---

**P**

PABX

- connecting the base . . . . . 18
- setting dialling mode. . . . . 20
- setting flash time . . . . . 20
- switching to tone dialling. . . . . 20

Paging . . . . . 18

Phonebook . . . . . 14

- copying number from text . . . . . 16
- saving an entry . . . . . 15
- sending entry/list to handset . . . . . 16
- sending to handset . . . . . 16

Pin connections. . . . . 29

Playing back

- message (network mailbox) . . . . . 12

Playing back messages (network mailbox) . . . . . 12

Power adapter. . . . . 4

Power consumption. . . . . 28

Preselection . . . . . 11

Protection against calls . . . . . 22

---

**Q**

Questions and answers . . . . . 25

---

**R**

Radiation

- reducing. . . . . 17

Range. . . . . 5

Recall key . . . . . 1

Reception booster, see Repeater

Redial list . . . . . 9

Registering (handset). . . . . 7, 18

Repeater. . . . . 19

Restoring to default setting . . . . . 23

Restoring to factory settings. . . . . 23

Ringtone

- changing . . . . . 21
- melody for internal/external calls . . . . . 21
- time control for external calls. . . . . 22

Ringtones . . . . . 21

Router

- connecting the base . . . . . 18

---

**S**

Safety precautions. . . . . 4

Screensaver . . . . . 21

Searching

- handset . . . . . 18
- in phonebook. . . . . 15

- Selecting an entry from the phonebook . . . . . 15

Setting

- telephone . . . . . 21

Setting flash time (PABX) . . . . . 20

Setting the date . . . . . 7

Setting the time . . . . . 7

Setting up

- handset . . . . . 6

Signal strength . . . . . 30

Signal tone, see Advisory tones

Snooze mode (alarm) . . . . . 17

Sound, see Ringtone

Speaker . . . . . 10

Star key . . . . . 1

Status bar . . . . . 1

- icons . . . . . 30

System PIN

- changing . . . . . 23
- resetting . . . . . 23

---

**T**

Talk key . . . . . 1

Technical data . . . . . 28

Telephone

- operating. . . . . 8
- restoring to default setting . . . . . 23
- setting. . . . . 21

Telephone jack, pin connections . . . . . 29

Time control

- ringtone for external calls . . . . . 22

Tone dialling (DTMF) . . . . . 20

Transferring an external call internally . . . . . 19

Troubleshooting . . . . . 25

---

**U**

Unknown . . . . . 10

Upper/lower case . . . . . 9

---

**V**

VIP ringtone . . . . . 14

Volume

- handset handsfree/earpiece volume . . . . . 10

---

**W**

Warning tone, see Advisory tones

---

**X**

XES mode . . . . . 20

---

Issued by  
Gigaset Communications GmbH  
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2014  
Subject to availability.  
All rights reserved. Rights of modification reserved.  
[www.gigaset.com](http://www.gigaset.com)



A31008-M2601-T101-1-8U19