

Gigaset

C530

Congratulations

By purchasing a Gigaset, you have chosen a brand that is fully committed to sustainability. This product's packaging is eco-friendly!

To learn more, visit www.gigaset.com.



GIGASET. INSPIRING CONVERSATION.
MADE IN GERMANY

Overview of handset



- 1 **Display in idle status**
- 2 **Status bar** (→ page 47)
Icons display current settings and operating status of the phone
- 3 **Display keys** (→ page 15, → page 27)
- 4 **Message key** (→ page 16)
Access to the calls and message lists;
Flashing: new message or new call
- 5 **End call key, On/off key**
End call;
Cancel function;
Go back one menu level (press **briefly**);
Back to idle status (press and **hold**);
Switch handset on/off (press and **hold** in idle status)
- 6 **Hash key**
Keypad lock on/off (press and **hold** in idle status);
Toggles between upper/lower case and digits;
Insert a dialling pause (press and **hold**)
- 7 **Microphone**
- 8 **Recall key**
Consultation call (flash) (press and **hold**)
- 9 **Star key**
In idle status: Ringtone on/off (press and **hold**);
With an open connection: Switch from pulse dialling to tone dialling (press **briefly**);
When inputting text: Open special characters table
- 10 **Connection socket for headset** (→ page 11)
- 11 **Key 1**
Select network mailbox (press and **hold**)
- 12 **Answer call key / Handsfree key**
Dial number displayed;
Accept call;
Switch from earpiece to handsfree mode;
Open the redial list (press **briefly**);
Start dialling (press and **hold**);
- 13 **Control key / Menu key** (→ page 14)

Overview of base station



Registration/paging key

- ◆ Locate handsets ("Paging") (press **briefly**) → page 33.
- ◆ Register handsets and DECT devices (press and **hold**) → page 32.

Contents









Overview of handset	1
Overview of base station	2
Safety precautions	4
Getting started	5
Understanding the operating steps in the user guide	13
Getting to know your phone	14
Making calls	18
Adjusting the telephone settings	23
Operating a repeater	28
Changing the system PIN	29
Restoring phone to default setting	29
ECO DECT	30
Network mailbox	31
Multiple handsets	32
Phonebook (Address book)	35
Call list	38
Contactability	39
Calendar	40
Alarm clock	42
Baby monitor	43
Operating the telephone on a router/PABX	45
Display icons	47
Menu tree	49
Customer Service & Assistance	51
Environment	55
Appendix	56
Accessories	59
Index	62

Safety precautions

Warning

Read the safety precautions and the user guide before use.

Explain their content and the potential hazards associated with using the device to your children.

	Use only the power adapter indicated on the device.
	Use only rechargeable batteries that correspond to the specification (see "Specifications"). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.
	Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g., doctor's surgery. If you use a medical device (e.g., a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Specifications").
	Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing. Your Gigaset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed. The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.
	The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.
	Do not use the devices in environments with a potential explosion hazard (e.g., paint shops).
	If you give your Gigaset to a third party, make sure you also give them the user guide.
	Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.

Please note

- ◆ The device cannot be used in the event of a power failure. It is also **not** possible to transmit **emergency calls**.
- ◆ Emergency numbers **cannot** be dialled if the **keypad/display lock** is activated!

Getting started

Checking the contents of the package

- ◆ One **base station**,
- ◆ One power adapter for the base,
- ◆ One phone cord,
- ◆ One **handset**,
- ◆ One battery cover (rear cover for the handset),
- ◆ Two batteries,
- ◆ One belt clip,
- ◆ One user guide.

Setting up the base station and charging cradle (if included)

The base and charging cradle are designed for use in closed, dry rooms in a temperature range of +5°C to +45°C.


- ▶ Set up the base on a level, non-slip surface at a central point in the building or house, or mount the base on the wall (→ page 6).

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, marks on the surfaces cannot be completely ruled out.

Notes

- ◆ Never expose the telephone to the effects of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and fumes.
- ◆ Pay attention to the range of the base. This is up to 50 m inside buildings and up to 300 m in unobstructed outdoor areas. The range is reduced when **Maximum Range** is deactivated (→ page 30).

Connecting the base station to the telephone network and the mains power supply

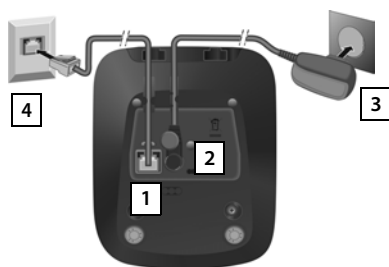


- ▶ Insert the phone cable into the connection socket **1** at the rear of the base until it clicks into place and feed under the cable protection.
- ▶ Insert the power cable for the power adapter into the connection socket **2** at the rear of the base and rotate the right-angle plug under the cable protection.
- ▶ Connect the power adapter **3**.
- ▶ Connect the phone jack **4**.

Notes

- ◆ The power adapter must **always be connected**, as the phone will not operate without a power supply.
- ◆ Use only the **supplied** power adapter and phone cord. Pin connections on telephone cables can vary (pin connections, → page 58).

Mounting the base station on the wall (optional)

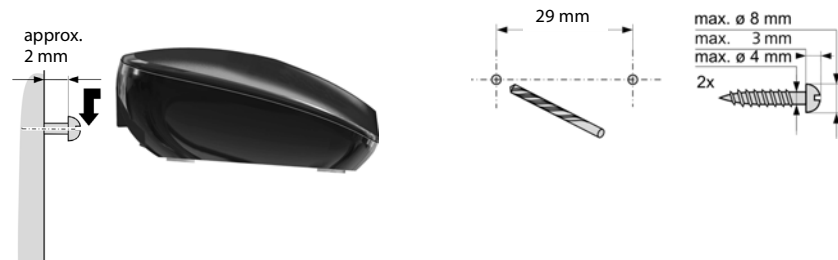

Setting up the handset for use

The display is protected by a plastic film. **Please remove the protective film!**

Inserting the batteries and closing the battery cover

Caution

Use only rechargeable batteries recommended by Gigaset Communications GmbH (→ page 57), as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.



- ▶ Insert the batteries with the polarity in the right direction (for correct +/- direction, see diagram).

- ▶ Insert the battery cover on the top **1**.
- ▶ Then press the cover until it clicks into place **2**.

To open the battery cover, for example to change the batteries:


- ▶ Grip the notch on the cover **3** and slide it downwards **4**.

Getting started

Belt clip

The handset has notches on each side to attach the belt clip.

- ◆ **To attach** — press the belt clip onto the back of the handset so that the tabs on the belt clip click into place in the notches.
- ◆ **To remove** — press the centre of the belt clip firmly with your right thumb, push the fingernail of your left thumb up between the clip and the casing and pull the clip in an upward direction.

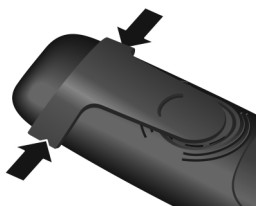

Charging the batteries

The batteries are supplied partially charged. Please charge completely before use. (The batteries are fully charged when the power icon ⚡ disappears from the display.)

- ▶ Charge the handset in the base for **8.5 hours**.



Notes


- ◆ The handset may only be placed in the designated base/charging cradle.
- ◆ The battery may heat up during charging. This is not dangerous.
- ◆ After a time, the charge capacity of the battery will decrease for technical reasons.
- ◆ Handsets contained in the package have already been registered to the base. If, however, a handset has not been registered (display "**Please register handset**" or "**Place handset in base**"), please register it manually (→ page 32).

Changing the display language


You can also change the display language via the menu:

▶ ▶ OK ▶ Language ▶ OK ▶ Select language ▶ Select

or, if you do not understand the language currently set, go to:

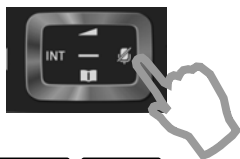

- ▶ Press right on the control key.

 

- ▶ Press keys and **slowly** one after the other.

Example




The language selection display appears.
The current language (e.g. English) is selected.



- ▶ Press the down control key ...

Example

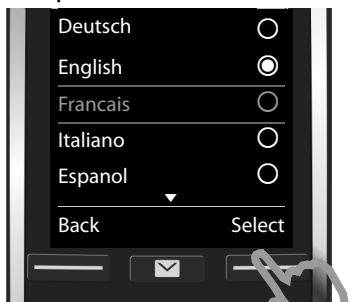

... until the language you wish to use is displayed e.g. French.

- ▶ Press the **right** key, directly under the display, to select the language.

Example




The selection is marked with .

- ▶ Press and **hold** the End call key to return to idle status.

Setting the date and time


Set the date/time so that the correct date and time can be assigned to incoming calls, and so that you can use the alarm.

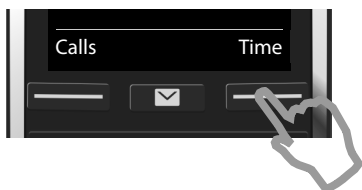

- ▶ Press the key **Time** below the display screen to open the input field.

(If you have already set the date/time, open the input field via the menu:

☰ ▶ ⚙ ▶ OK ▶ Date/Time ▶ OK)

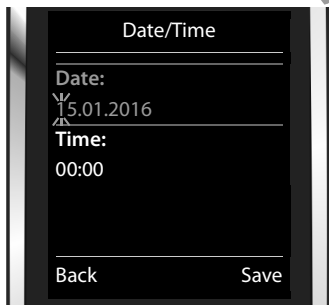

The submenu **Date/Time** is shown on the display.

- ▶ The active input position flashes.
Enter the day, month and year as an 8-digit number via the keypad,
e.g.

1	sp	4	TRV	GH	1	sp	0	Δ	2	AB	0	Δ	1	sp	6	MNO
---	----	---	-----	----	---	----	---	---	---	----	---	---	---	----	---	-----

for 14.10.2016.




Press the **right** or **left** control key to change the input position, e.g. to correct an entry.




- ▶ Press the **down** control key to switch to the time input field.
- ▶ Enter the hours and minutes in 4-digit format via the keypad e.g.,

0	Δ	7	TRV	GH	1	sp	5	AB
---	---	---	-----	----	---	----	---	----

for 07:15 am.
Change the input position with the control key if necessary.
- ▶ Press the key **Save** below the display screen to save the entry.

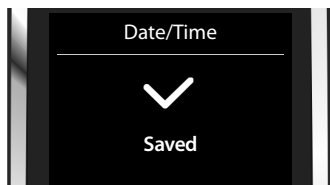

Display shows: **Saved**. You will hear a confirmation tone.

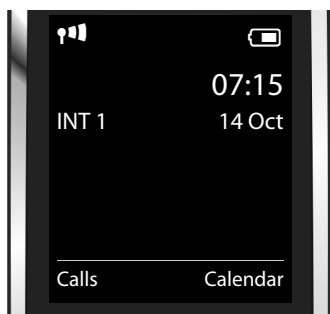

You will automatically return to idle status.

Your phone is now ready for use.

Connecting the headset



You can connect a headset with 2.5 mm jack connectors. For information on recommended headsets, see the relevant product page at www.gigaset.com

What would you like to do next?

After successfully setting up the phone, you can make calls straight away, customise your Gigaset according to your requirements or firstly familiarise yourself with the operation.

Setting ringtones

Assign specific tunes to internal and external calls, reminders (→ page 25), wake-up calls (→ page 42) and to certain callers (→ page 35).

Protecting yourself against unwanted calls

Set your phone up so that it doesn't ring if there is an anonymous call or use the time control (→ page 26).

Register an existing Gigaset handset and add it to the phonebook

Use available handsets to continue calling from your new base. Transfer directory entries from these handsets to your new handset (→ page 32, → page 36).




 

 
 

 
Configuring ECO DECT settings

Reduce the transmission power (emissions) of your phone (→ page 30).

If you have any questions about using your phone, please read the tips on troubleshooting (→ page 52) or contact our Customer Service team (→ page 51).

Understanding the operating steps in the user guide

The keys on your Gigaset handset are set out in these operating instructions as follows:

 /  / 	Answer call key / Menu key / End call key
 to 	Number / Letter keys
 / 	Star key / Hash key
 / 	Message key / Recall key




 
 

 
 

Overview of display icons (→ page 47).

Example: Activating/deactivating Auto Answer

Illustration in the user guide:


 ▶  ▶ **OK** ▶  **Telephony** ▶ **OK** ▶ **Auto Answer** ▶ **Change** (☑ = activated)

Follow this procedure:

- ▶ : With the handset in idle status, press the **right** control key to open the main menu.
- ▶ : Navigate to the  icon using the control key .
- ▶ **OK**: Press the display key **OK** or the middle of the control key  to open the submenu **Settings**.
- ▶  **Telephony**: Scroll to the entry **Telephony** with the control key .
- ▶ **OK**: Press the display key **OK** or the middle of the control key  to open the submenu **Telephony**.
- ▶ **Auto Answer**: The activate/deactivate auto answer function is selected.
- ▶ **Change** (☑ = activated): Press the display key **Change** or the middle of the control key  to alternate between activating or deactivating (☑ = activated, ☐ = deactivated).

 
Getting to know your phone

Switching the handset on/off

- ▶ Press and **hold** the End call key  in idle status to switch the handset on or off.


Locking/unlocking the keypad

The keypad lock prevents any accidental use of the phone. If you press a key when the keypad is locked, a message is displayed.

- ▶ Press and hold the  key to lock or unlock the keypad.

If a call is signalled on the handset, the keypad automatically unlocks, and you can accept the call. It then locks again when the call is finished.






Control key

In the description below, the side of the control key (up, down, right, left, middle) that you have to press in the different operating situations is marked in black, e.g.  for "press right on the control key".






The control key allows you to navigate within menus and entry fields. In idle status or during an external call, it has the following functions:

When the handset is in idle status

-  Open the phonebook.
-  or  Open the main menu.
-  Open list of handsets.
-  Bring up the menu for setting the handset's call volume (→ page 20).

During an external call

-  Open the phonebook.
-  Initiate an internal consultation call.
-  Adjust the loudspeaker volume for earpiece and handsfree mode.

Functions when pressing the centre of the control key

The key has different functions, depending on the operating situation.

- ◆ **In idle status**, it opens the main menu.
- ◆ **In submenus, selection and entry fields**, the key takes on the function of the display keys **OK**, **Yes**, **Save**, **Select** or **Change**.

Note


These instructions demonstrate opening the main menu by pressing the right of the control key and confirming the functions by pressing the appropriate display key. However, if you prefer, you can also press the middle of the control key.

Display keys

The display keys have a function preset by default in idle status, but the keys can be re-assigned (→ page 27).

The functions of the display keys change depending on the operating situation.

Example

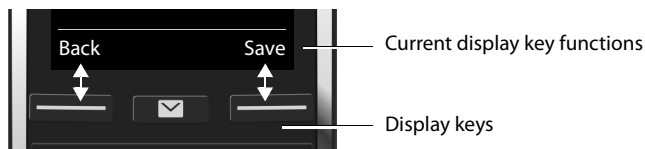

Some of the important display keys are:

- Options** Open a menu for further functions.
- OK** Confirm selection.
- Back** Skip back one menu level or cancel operation.
- Save** Save entry.

Overview of icons on the display keys (→ page 48).

Menu guidance


The functions of your telephone are displayed on a menu that consists of several levels. Menu overview → page 49.


Main menu (first menu level)

- ▶ When the handset is in idle status, press **right** on the control key  to open the main menu.


The main menu functions are shown in the display as icons. The icon for the selected function is highlighted and the name of the associated function appears in the display header.

Accessing a function, i.e. opening the corresponding submenu (next menu level):

- ▶ Use the control key  to navigate to the required function and press the display key **OK**.

Returning to idle status: **Briefly** press the display key **Back** or End call key .

Example

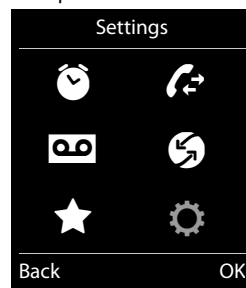

Submenus

The functions in the submenus are displayed as lists.

To access a function:

- ▶ Scroll to the function using the control key (⏪) and press **OK**.

Returning to the previous menu level: **Briefly** press the display key **Back** or End call key (⏪).

Returning to idle status

From any menu:

- ▶ Press and **hold** the End call key (⏪).




Or:

- ▶ If you do not press a key, the display **automatically** returns to idle status after 2 minutes.

Message lists

Any messages you receive are saved in the message lists. An advisory tone sounds as soon as a **new entry** appears on a list. The Message key also flashes (if activated, → page 24). Icons for message types and the number of new messages are shown on the idle display.

New messages available:

- ◆  On the network mailbox (→ page 31)
- ◆  In the missed calls list
- ◆  In the missed alarms list (→ page 41)

Open the message list by pressing the Message key (⏪).

You can access the following message lists:


- ◆ **Mailbox:** Network mailbox (if your network provider supports this function and the number of the network mailbox has been stored.)
- ◆ **Missed Calls:** Missed call list (see "Call list" → page 38)
- ◆ **Missed Alarms:** Missed appointments list

The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.


Opening the list: (⏪) Select required list. ▶ **OK**

Exception: If you select the **network mailbox**, the number of the network mailbox will be selected (→ page 31). Lists are not opened on the display.

Example

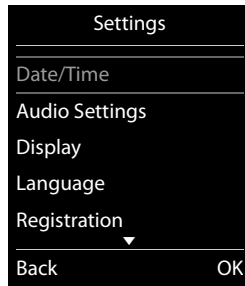

Example

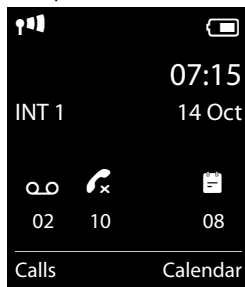


Entering numbers and text

If several number and/or text fields are displayed (e.g. **First Name** and **Surname** in a phonebook entry), the field is automatically activated. The following fields must be activated by navigating with the control key (↩). A field is activated when a cursor is blinking inside it.

Correcting incorrect entries

- ◆ Deleting **characters** before the cursor: press the display key **<C** briefly.
- ◆ Deleting **words** before the cursor: press and **hold** the display key **<C**.

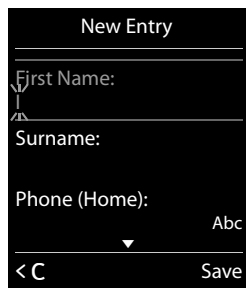


Entering text

- ◆ **Letters/Characters:** Multiple letters and characters are assigned to each key between **0-9** and **0-9**. The characters are shown according to the key in a selection line at the bottom left of the display. The selected character is highlighted. Briefly press the key several times in succession to select the required letter/character.
- ◆ **Placing the cursor:** Letters/characters are inserted at the cursor position. You can insert the cursor by pressing the control key (↩), or (↩) in fields with multiple characters.
- ◆ **Typing lower case, upper case and numbers:** Press the hash key (**#->**) to switch between lower case, upper case or numbers for the **following letters**.
When editing a phonebook entry, the first letter and each letter following a space is automatically in upper case.
- ◆ **Special characters:** Press the star key (***->**) to open the special characters table. Navigate to the character desired using the star key and press the display key **Insert** to select it.
- ◆ **Special letters:** Umlauts or other marked/diacritic characters can be selected by pressing the corresponding letter several times. See the character table → page 58.

Making calls

Making an external call

▶ Enter number, **briefly** press the Answer call key .

Or:



▶ Press and **hold** the Answer call key , enter number.

You can cancel the dialling process with the End call key .

Dialling with the redial list


The redial list contains the 20 numbers last dialled with the handset. You can manage this similarly to your phone's message lists (→ page 16).

▶ Press the Answer call key  **briefly** to open the redial list.

▶  Select entry. ▶ Press the Answer call key . The number is dialled.

When a name and corresponding phone number are displayed: Press the display key **View**.

Managing entries in the redial list:



▶ Open redial list. ▶  Select entry. ▶ **Options**

You can select the following functions:

◆ **Copy to Directory** ▶ **OK**

Copy an entry to the phonebook (→ page 35).

◆ **Display number** ▶ **OK**

Copy a number into the display and edit it or add to it, then select with  or save as a new entry in the phonebook with .

◆ **Delete entry** ▶ **OK**



Delete the selected entry.

◆ **Delete all** ▶ **OK**

Delete all entries.


Dialling from the call list

 ▶  ▶ **OK** ▶  Select list. ▶ **OK**

▶  Select entry. ▶ 

▶ The number is dialled.

Notes



- ◆ You can also bring up the call list using the display key **Calls**, but you must assign a display key accordingly (→ page 27).
- ◆ You can also open the list **Missed calls** using the Message key .

Example



Dialling with the phonebook


 ▶  Select entry. ▶ 


- ▶ If multiple numbers are entered: Select the number with  and press the Answer call key  or **OK**.
- ▶ The number is dialled.

One touch call

 
 
You can set up your phone so that you can dial a specific number when you press a **key of your choice**. This allows children, who are unable to enter a number, to call a certain number, for example.

 ▶  ▶ **OK** ▶  **One Touch Call** ▶ **OK**

- ▶ **Activation:**  **On / Off**
- ▶ **Call to:** Enter or change the number that you wish to dial.
- ▶ **Save**


The activated One Touch Call appears on the idle display. The saved number is dialled by pressing any key. Press the End call key  to cancel dialling.

Ending one touch call mode:

- ▶ Press the display key **OFF**. ▶ Press and **hold** the  key.
- Or:
- ▶ Press and **hold** the  key.

Accepting a call



You have the following options:

- ▶ Press .
- ▶ If **Auto Answer** is switched on (→ page 24), remove the handset from the charging cradle.

Accepting a call with the Gigaset L410 handsfree clip (→ page 60): Press the Answer call key. To use your L410, you must register it to your base station. Proceed as described in the operating instructions for the Gigaset L410.

Accepting/rejecting call waiting

If you receive a call while conducting an external call, you will hear the call waiting tone. If the number is transferred, you will see this number or the name of the caller on the display.

- ▶ Rejecting a call: ▶ **Options** ▶  **Reject waiting call** ▶ **OK**
- ▶ Accepting a call: ▶ Press the display key **Accept**. You will then be speaking to the new caller. The previous call is placed on hold.
- ▶ **Returning to the call on hold:** To end the current call and return to the call on hold, press .

Caller display

Calling Line Identification

The caller's phone number is displayed. If the caller's number is stored in your phonebook, the number type and name are displayed.

No Calling Line Identification

Instead of name and number, the following is displayed:

- ◆ **External:** No number has been transferred.
- ◆ **Withheld:** Caller has withheld Calling Line Identification.
- ◆ **Unavailable:** Caller has not requested Calling Line Identification.

Notes on phone number display for CLIP

By default, the number of the caller is shown on the handset of your telephone, → page 53 or
▶ www.gigaset.com/service


Handsfree mode

If you are going to let someone listen in, you should tell the other party that this is happening.

Activating/deactivating handsfree mode during a call and when establishing a connection:

- ▶ Press .


Placing the handset in the charging cradle during a call:


- ▶ Press and hold  for a further 2 seconds while placing the handset in the charging cradle.

Adjusting the loudspeaker volume

- ◆ Accessing the settings **via the menu:**

 ▶  ▶ OK ▶  **Audio Settings** ▶ OK ▶ **Handset Volume** ▶ OK

▶ **Earpiece:**  Volume can be set at 5 levels for the earpiece and headset.

▶ **Speaker:**  Set the volume at 5 levels.

▶ **Save**


- ◆ Accessing the settings **during a call** for the mode currently in use (handsfree, earpiece, headset):

▶ control key  ▶ .

▶ The setting is saved automatically after 2 seconds or press the display key **Save**. The screen reverts back to its previous display.


Switching the microphone on/off (muting)

If you turn the microphone off during a call, your caller can no longer hear you.

- ▶ Press  to switch the microphone on/off.



Using provider-specific functions (network services)

Network services depend on and must be requested from your network provider (which may incur additional charges). Network services fall into two distinct groups

- ◆ Network services that are activated for the following call or all subsequent calls when no call is being made (e.g. calling anonymously (without Calling Line Identification)). You can easily activate/deactivate these network services via the menu .
- ◆ Network services that are activated during an external call, e.g., "consultation call", "swapping between two callers" and "setting up conference calls". These services are provided to you during an external call in the option slider (e.g. **Ext. Call, Conf.**).

You will find a general description of the features on your network provider's website or at one of their store branches.

Notes

- ◆ To activate/deactivate the following services, a code is generally sent to the telephone network.
 - ▶ After a confirmation tone from the telephone network, press .
- ◆ All functions that can be activated under menu item  are services made available by your network provider. If you require assistance, please contact your network provider.
- ◆ It is not possible to reprogram the network services.

Setting network services

Call waiting during an external call

If the function is activated, you will be notified whilst on an **external** call by a call waiting tone and a message on the display that another external caller is waiting.

Activating/deactivating call waiting:


 ▶  ▶ OK ▶  Call Waiting ▶ OK ▶ Status:  On / Off ▶ Send

Network services during an external call

Call waiting during an external call


If the function is activated (→ page 21), you will be notified whilst on an **external** call by a call waiting tone that another external caller is waiting. If the number is transferred, you will see this number or the name of the caller on the display.

You have the following options:

- ▶ **Options** ▶  **Reject waiting call** ▶ OK
The waiting caller hears the busy tone.

Or:

- ▶ **Accept**
Once you have accepted the waiting call, you can switch between the two callers ("**Call swapping**" → page 22) or speak to both at the same time "**Conference call**" → page 22).

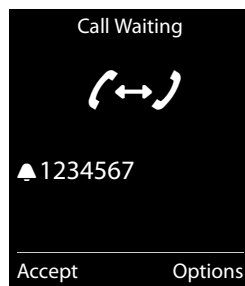

Making calls

Making a consultation call

Make another external call during an external call. The first call is placed on hold.

- ▶ **Ext. Call** ▶ Enter the second participant's number.


The previous call is placed on hold. The second participant is called.

- ▶ If the second participant does not answer: Press the display key **End**.

Or:

- ▶ If the second participant does answer: You will then be speaking to the participant.


Ending a consultation call:

- ▶ **Options** ▶  **End active call** ▶ **OK**

You will be reconnected to the first call participant.

Or:


Press . You will receive a callback from the first participant.

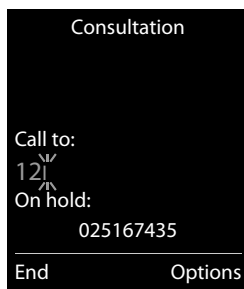




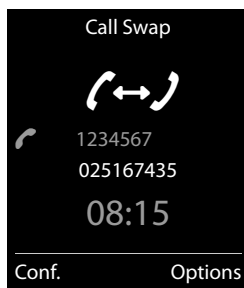
Call swapping

Switching between two calls. The other call is placed on hold.

Prerequisite: You must be conducting an external call and have called a second participant (consultation call) or have accepted a waiting call.

The numbers or names of both participants are shown in the display. The participant that you are talking to at that point is indicated with the icon  and highlighted.


- ▶ You can switch between calls using the control key . The other call is placed on hold.
 - ▶ Ending the current call:
 - ▶ **Options** ▶  **End active call** ▶ **OK**You will be reconnected to the participant on hold.
- Or:
- Press . You will receive a callback from the participant on hold.



Conference call

You will then be speaking to both participants at the same time.

Prerequisite: You must be conducting an external call and have called a second participant (consultation call) or have accepted a waiting call.

- ▶ Press **Conf.** You and the other two callers can hear and speak to each other simultaneously.
- ▶ End call with both participants: Press .

Or:

- ▶ Return to call swapping: Press the display key **End Conf.**

You will be reconnected to the participant with whom you started the conference call.

Each of the participants can end their participation in the conference call by pressing the End call key and terminating the call.

Adjusting the telephone settings

The handset and base station are preconfigured, but you can change the settings to suit your individual requirements.

The settings can be changed via the menu **Settings** whilst on a call or in idle status.

Changing the display language


☰ ▶ ⚙ ▶ OK ▶ 🗣 Language ▶ OK ▶ 🗣 Select languages ▶ Select (● = selected)

Setting your country and local area codes

Your area code (international and local area code) must be saved on the phone before you can transfer phone numbers (e.g. in vCards). Some of these numbers are already preset. Please ensure that the prefix is correctly separated from the rest of the area code.

☰ ▶ ⚙ ▶ OK ▶ 📞 Telephony ▶ OK
 ▶ 🗣 Area Codes ▶ OK ▶ 🗣 Navigate to the entry field,
 delete the number using **⏪** if needed ▶ Enter the number
 ▶ Save

Example

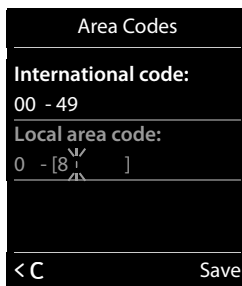

Adjusting the handset display settings


Setting a screensaver

You can set a screensaver for the display when in idle status. You can choose from an analogue clock, a digital clock or an image

To show the display in idle status, **briefly** press **📞**.

☰ ▶ ⚙ ▶ OK ▶ 📺 Display ▶ OK
 ▶ Screensaver (✓ = activated) ▶ Edit
 ▶ Activation: 📺 On / Off
 ▶ Selection:
 📺 Digital Clock / Analog Clock / [Images]
 Or:
 ▶ View (View screensaver)
 ▶ 🗣 Select screensaver ▶ OK
 ▶ Save

Example

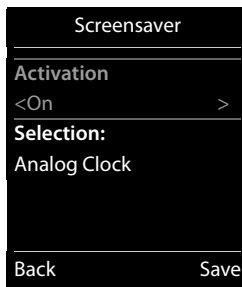

Setting the colour scheme

You can set the display to show a dark or a light background.

☰ ▶ ⚙ ▶ OK ▶ 📺 Display ▶ OK ▶ 🗣 Colour Schemes ▶ OK
 ▶ 🗣 Colour Scheme 1 / Colour Scheme 2 ▶ Select (● = selected)

Setting the display backlight

The display backlight is always lit when the handset is not in the base/charging cradle or when a key is pressed. Any **digit keys** pressed appear on the display for pre-dialling.

You can also activate/deactivate the display backlight for idle status:

▶ ▶ OK ▶ Display ▶ OK ▶ Backlight ▶ OK

In Charger: On / Off

Out of Charger: On / Off

▶ Save

Note

The handset's standby time can be significantly reduced if the display backlight is activated.

Activating/deactivating Message key flashing

Specify whether receipt of new messages should be displayed on the handset by the message LED.

▶ In idle status: ▶ * # 0 5 # *

The display shows the number 9.

▶ Press the following keys to select the type of message:

7 4 for messages on the network mailbox
 7 5 for missed calls

You will see the number 9 followed by your entry (e.g. 975); the current setting will be flashing in the entry field (e.g. 0).

▶ Press the key 0 or 1 to determine the setting for new messages:

0 The Message key flashes
(stops when the key is pressed)

1 The Message key does not flash

▶ Confirm by pressing **OK** or go back to the idle display without saving by pressing **Back**.



Activating/deactivating Auto Answer

When set to Auto Answer, the handset accepts an incoming call as soon as you remove it from the charging cradle.

▶ ▶ OK ▶ Telephony ▶ OK ▶ **Auto Answer** ▶ **Change** = activated)

Regardless of the setting **Auto Answer**, the connection ends as soon as you place the handset back in the charging cradle. Exception: Press and hold for a further 2 seconds while placing the handset in the charging cradle.

Setting earpiece profiles

You can set various profiles for the **earpiece** to optimally adapt your phone to your environment. Check which is the most comfortable for you.

☰ ▶ ⚙ ▶ OK ▶ 🔄 Audio Settings ▶ OK ▶ 🔄 Earpiece Profiles ▶ OK ▶ 🔄 Select profile ▶ Select (● = selected)

Earpiece Profiles: High and Low. The default is **Low**.

Setting the handset ringtones

Setting the ringtone volume

☰ ▶ ⚙ ▶ OK ▶ 🔄 Audio Settings ▶ OK
▶ 🔄 Ringtones (Handset) ▶ OK ▶ Volume ▶ OK

▶ For internal calls and alarms:


🔊 Volume can be set at 5 levels or crescendo (increasing volume) for internal calls and anniversaries.

▶ External Calls:

🔊 Volume can be set at 5 levels or crescendo (increasing volume) for external calls.

▶ Save

Example

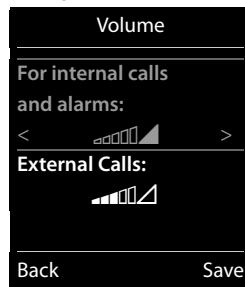

Setting the ring melody

☰ ▶ ⚙ ▶ OK ▶ 🔄 Audio Settings ▶ OK ▶ 🔄 Ringtones (Handset) ▶ OK
▶ 🔄 Melodies ▶ OK

▶ **Internal Calls:** 🗲 Setting the volume/melody for internal calls and anniversaries.

▶ **External Calls:** 🗲 Setting volumes/melodies for external calls.

▶ Save

Activating/deactivating the ringtone

Activating/deactivating the ringtone **permanently**: Press and **hold** the star key $* \square$. When the ringtone is deactivated, 🗲 appears in the status bar.

Deactivating the ringtone for a **current call**: Press **Silence** or 🗲.

Activating/deactivating the alert tone (beep)

You can activate an alert tone (beep) instead of the ringtone.

Press and **hold** the star key $* \square$ and **within three seconds** ▶ **Beep**.


When the alert tone is activated, 🗲 appears in the status bar.

Press and **hold** the star key $* \square$ to deactivate the alert tone again.

Activating/deactivating advisory tones

Your handset uses advisory tones to tell you about different activities and statuses. These advisory tones can be activated/deactivated independently of each other.

 ▶  ▶ OK ▶  Audio Settings ▶ OK ▶  Advisory Tones ▶ OK

▶ **Key Tones:**  On / Off

Tone when keys are pressed.

▶ **Confirmation:**  On / Off

Confirmation/error tone after making entries, advisory tone when a new message has been received.

▶ **Battery:**  On / Off

Warning tone when there are fewer than 10 minutes of talktime remaining (every 60 seconds). There is no battery warning when the baby monitor is activated.

▶ Save

Activating/deactivating music on hold

You can activate/deactivate hold music for external calls during consultation and forwarding.

 ▶  ▶ OK ▶  Audio Settings ▶ OK ▶  Music on hold ▶ Change = activated)

Protection against unwanted calls

Setting time control for external calls

You can specify a time period when you do not want the telephone to ring.

 ▶  ▶ OK ▶  Audio Settings ▶ OK
▶  Ringtones (Handset) ▶ OK ▶  Time Control ▶ OK

▶ For external calls:  On / Off



If activated:

▶ **Suspend ring. from:** Enter the start of the period.

▶ **Suspend ring. until:** Enter the end of the period.

▶ Save

Example

Time Control	
For external calls:	
On	
Suspend ring. from:	
	22:00
Suspend ring. until:	
	07:00
Back	Save

Note

During this period, your phone will continue to ring for numbers to which you have assigned a VIP ringtone in the phonebook.

Protection from anonymous callers

You can set your phone so that it doesn't ring for anonymous calls (→ page 20, callers who have withheld Calling Line Identification). The call is only signalled on the display. The setting only applies to handsets for which the setting is configured.

 ▶  ▶ OK ▶  Audio Settings ▶ OK ▶  Ringtones (Handset) ▶ OK ▶  Anon. Calls Silent ▶ Change = function activated)

Quick access to numbers and functions


The **digit keys**  up to  can be assigned to a **number from the phonebook**.

The left and right **display keys** have a **function** preset by default, but the keys can be re-assigned (→ page 27).

You can then dial the number or start the function by simply pressing a key.

Assigning digit keys

Prerequisite: You must assign a number to the digit key.

- ▶ Press and **hold** the digit key.
Or:
▶ **Briefly** press the digit key. ▶ Press the display key **QuickDial**.
- ▶ The phonebook opens. ▶  Select entry. ▶ **OK**

The entry is saved to the corresponding digit key.

Note

If you delete or edit the entry in the phonebook at a later date, this will not affect the assignment to the number key.

Selecting numbers/changing an assignment

Prerequisite: You must have assigned a number to the digit key.

When the handset is in idle status

- ▶ Press and **hold** the digit key: The number is dialled immediately.


Or:

- ▶ **Briefly** press the digit key: Press the left-hand display key with the number/name (abbreviated if necessary) to dial the number.

Or:

Press the display key **Change** to change the key assignment, or press the display key **Clear Key** to delete the assignment.

Assigning display keys

- ▶ In idle status, press and **hold** the left or right-hand display key. ▶ The list of possible key assignments is opened. ▶  Select entry ▶ **OK**

Choose from the following functions:

Baby Monitor	Set and activate the baby monitor (→ page 43).
Alarm Clock	Set and activate the alarm clock (→ page 42).
Calendar	Open calendar (→ page 40).
One Touch Call	Set up one touch call (→ page 19).
Redial	Show redial list (→ page 18).
More Functions...	You can also choose further functions:
Call Lists	Show call list (→ page 38).
Call Divert	Set up call forwarding (→ page 39).

Operating a repeater

You can use the Gigaset Repeater to increase the range of your Gigaset handset.

The function and setting of your repeater depends on the repeater version used. The repeater version can be identified by the item number on the product label:







Gigaset Repeater (earlier than version 2.0) S30853-S601-...

Gigaset Repeater 2.0 S30853-S602-...

For additional information, see the repeater user guide and our website at www.gigaset.com

Gigaset Repeater (earlier than version 2.0)

Prerequisites:

- ◆ ECO DECT function **Maximum Range** must be activated.
- ◆ ECO DECT function **No Radiation** must be deactivated.
- ◆ Encryption must be deactivated:
  **OK**  **System**  **OK**  **Encryption**  **Change** (☐ = deactivated)

Modifying the ECO DECT functions → page 30.

Registering a repeater:

▶ Connect the repeater to the mains power supply. ▶ Press and **hold** (min. 3 secs) the Registration/Paging key on the base (C530 → page 2). ▶ The repeater registers automatically.

You can register up to 6 repeaters.

Gigaset Repeater 2.0

Registering the Gigaset Repeater 2.0:

▶ Connect the repeater to the mains power supply. ▶ Press and **hold** (min. 3 secs) the Registration/Paging key on the base (C530 → page 2). ▶ The repeater registers automatically.

You can register a maximum of 2 Gigaset Repeaters 2.0.

The ECO DECT function **Maximum Range** is activated and **No Radiation** is deactivated. The settings cannot be changed whilst the repeater is registered.

De-registering the Gigaset Repeater 2.0:

  **OK**  **System**  **OK**  **Repeater**  **OK**  Select repeater. ▶ **De-reg.**

Changing the system PIN

 ▶  ▶ OK ▶  System ▶ OK ▶  System PIN ▶ OK

▶ If current PIN not 0000: enter current PIN ▶ OK

▶ Enter new system PIN (4 digits; 0 - 9) ▶ Save

Resetting system PIN

If you have forgotten your system PIN, you can reset it to **0000**. If you do this, **all the base settings** will be reset and **all the handsets** will be de-registered!

▶ Remove the power cord from the base.

▶ Press and hold the Registration/Paging key (C530 → page 2) and at the same time reconnect the power cord to the base.

▶ Hold the Registration/paging key for at least 5 seconds.

Restoring phone to default setting

You can reset individual modifications to base and handset settings separately.

The following are **not** affected by the reset:

- ◆ Date / time,
- ◆ Registration of handsets to the base and the current selection of the base,
- ◆ System PIN,
- ◆ Entries in the calendar and phonebook,
- ◆ Redial list.

When resetting the handset (**Handset Reset**), audio and display settings will be deleted.

When resetting the base (**Base Reset**), ECO DECT, system settings and internal handset names, as well as call lists will be reset

Resetting the handset/base station

 ▶  ▶ OK ▶  System ▶ OK ▶  Handset Reset / Base Reset ▶ For Base Reset:

Enter the system PIN ▶ OK ▶ Confirm security prompt with Yes

ECO DECT uses less energy and reduces transmission power.

Reducing transmission power (radiation)

In normal operation (default setting):

The device range is set to maximum as default. This guarantees optimum wireless management. In idle status, the handset will not function (as it is not transmitting). Only the base will maintain contact with the handset via a low wireless signal. During a call, the transmission power automatically adapts to the distance between the base and handset. A closer distance to the base means lower transmission power.

You can reduce the transmission power even further:

1) Reducing the range and thereby lowering transmission power by up to 80%

In many spaces such as apartments, business rooms and offices, the maximum range is not necessary. If you deactivate the **Maximum Range** setting, you can reduce the transmission power during a call by up to 80%, using half of the range.

 ▶  ▶ OK ▶  ECO DECT ▶ OK ▶ **Maximum Range** ▶ **Change** (☑ = activated)


Display icon for reduced range → page 47.

This setting cannot be used with a repeater (→ page 28).

2) Deactivating DECT wireless module in idle status (Eco Mode+)

With the **No Radiation** setting, you can deactivate the transmission power of the base completely during idle status.


 ▶  ▶ OK ▶  ECO DECT ▶ OK ▶  **No Radiation** ▶ **Change** (☑ = activated)

When the wireless model is deactivated, the icon  is displayed in idle status instead of the signal strength icon.

This setting cannot be used with a repeater (→ page 28).

f

Notes

 
- ◆ To enjoy the benefits of the **No Radiation** setting, all registered handsets must support this feature.
- ◆ When the **No Radiation** setting is activated and a handset is registered to the base that does not support this feature, **No Radiation** will automatically be deactivated. As soon as this handset is de-registered, **No Radiation** will automatically be re-activated.
- ◆ The wireless connection will only be established for an incoming or outgoing call and the connection will be delayed by about 2 seconds.
- ◆ So that a handset can establish a wireless connection with the base more quickly for an incoming call, it must "listen" to the base more often, i.e. scan the environment. This increases power usage and reduces the standby and talktime duration of the handset.
- ◆ When **No Radiation** is activated, there will be no range display/range alarm on the handset. Contactability can be tested by assigning a line: Press and hold the Answer call key . You will hear the ringing tone.

Network mailbox



You cannot use the network mailbox unless you have **requested** it from your provider and saved the network mailbox number in your phone.

 ▶  ▶ OK ▶  **Network Mailbox** ▶ OK ▶ **Network Mailbox:** Enter the phone number of the network mailbox ▶ OK

Playing back network mailbox messages

▶ Press and **hold** the  key.

Or:

▶ Message playback via the message list:
Message key  ▶  **Net Mailbox:** ▶ OK

Or:

▶ Message playback via the menu:
 ▶  ▶ OK ▶ **Play Messages** ▶ OK

Your network mailbox is called directly. You can listen to the messages.

Deactivating network mailbox

Prerequisite: Your network provider supports this function.

 ▶  ▶ OK ▶  **Network Mailbox** ▶ OK ▶ **Status:**  **On / Off** ▶ **Send**

You hear **no** confirmation tone from the telephone network.

Multiple handsets

Registering handsets

You can register up to six handsets to your base. You must initiate handset registration on the handset **and** on the base station. Both must be carried out **within 60 secs**.

- ▶ **On the base station:** Press and **hold** (min. 3 secs) the Registration/paging key (C530 → page 2).
 - ▶ **On the handset C530** (for other handsets see "Notes"):
 - If the handset is not already registered to a base station: Press the display key **Register**.
 - If the handset is already registered to a base station:
 - ☰ ▶ ⚙ ▶ **OK** ▶ ☑ **Registration** ▶ **OK** ▶ **Register Handset** ▶ **OK**
 - ▶ If the handset is already registered to four bases: ☑ Select a base. ▶ **OK**
- The connection to the base is established, this may take some time.
- ▶ Enter the system PIN if required (factory setting: **0000**). ▶ **OK**

Successful registration is shown on the display.

Notes

- ◆ If six handsets are already registered to the base (all internal numbers assigned), replace the handset with the internal number 6 with the new one. If this is not possible, because a conversation is being held for example, the message **No available internal number** is given. In this case, de-register another handset that is no longer required and repeat the registration procedure.
- ◆ For **other Gigaset handsets** and handsets for other devices with GAP functionality, start the registration of the handset according to the respective user guide.

Using the handset on multiple bases

Your handset can be registered on up to four bases.

The active base is the base to which the handset was last registered. The other bases remain saved in the list of available bases.

You can change the assignment to the base **manually at any time**.

Alternatively, you can set the handset so that it selects the base with the best reception (**Best Base**), as soon as it loses connection to the current base.


- ☰ ▶ ⚙ ▶ **OK** ▶ ☑ **Registration** ▶ **OK** ▶ **Select Base** ▶ **OK** ▶ ☑ **Select base or Best Base**. ▶ **Select** (● = selected)

Changing name of a base station

- ☰ ▶ ⚙ ▶ **OK** ▶ ☑ **Registration** ▶ **OK** ▶ **Select Base** ▶ **OK** ▶ ☑ **Select base**. ▶ **Select** (● = selected) ▶ **Name** ▶ Change name. ▶ **Save**

De-registering handsets

 ▶  ▶ **OK** ▶  **Registration** ▶ **OK** ▶  **De-register Handset** ▶ **OK**

▶ The handset used is selected. ▶  Select another handset if required. ▶ **OK** ▶ If system PIN <> 0000: Enter the system PIN. ▶ **OK** ▶ Confirm de-registration with **Yes**.



If the handset is still registered to other bases, it switches to the base with the best reception (Best Base → page 32).

Locating a handset ("Paging")

▶ Press **briefly** the Registration/paging key on the base (C530 → page 2).


All handsets will ring at the same time ("paging"), even if ringers are switched off. (Exception: handset on which the baby monitor is activated).

Ending the search

- ▶ **On the base station:** Press the Registration/paging key again **briefly**, or
- ▶ **On the handset:** press  or  or press **Silence**, or
- ▶ **No action:** After approx. 3 minutes, the paging call will end **automatically**.

Changing the handset name and internal number

When registering multiple handsets, they will automatically be assigned the names "INT 1", "INT 2" etc. Each handset will automatically be assigned the lowest unassigned number (1-6). To change:

 ▶ The list of handsets is opened. Your own handset is marked <.

▶  Select another handset if required. ▶ **Options**

▶  **Rename** ▶ **OK** ▶ Enter names. ▶ **OK**




Or:

▶  **Edit Handset No.** ▶ **OK** ▶  Select number. ▶ **OK**

▶ **Save**

Making internal calls



Internal calls to other handsets registered to the same base are free of charge.


 (press **briefly**) ▶ The list of handsets is opened. Your own handset is marked <. ▶  Select the handset or **Call all** (group call) from the list if required. ▶ 

Holding down  immediately starts a call on **all** registered handsets.

 
Internal consultation/internal transfer

You receive a call from an **external** participant and would like to transfer the call to an **internal** participant or wish to consult him/her.

 ▶ The list of handsets is opened. ▶ If more than two handsets are registered to the base, select one handset or **Call all**. ▶  or **OK**


Holding a consultation call: You are speaking to the internal participant and are returning to your external call: ▶ **Options** ▶  **End active call** ▶ **OK**

Transferring an external call: You have two options to transfer the call:

- ▶ Wait until the participant called answers, then hang up:
Press the End call key .

Multiple handsets



Or:

 
- ▶ Hang up before the participant calls: Press the End call key .

If the participant called does not answer or does not transfer the call, end the consultation with **End**.

Establishing a conference call/call swapping


You are taking a call while a second call is being held. Both callers are indicated on the display.

- ▶ **Call swapping:** You can switch between both participants using .
- ▶ **Establishing a three-way conference call:** Press **Conf**.
Ending a conference call: Press **End Conf**. You are reconnected with the external participant. You can switch again between both participants using .

Each of the callers can end their participation in the conference call by pressing the End call key .

Accepting/rejecting call waiting

If you get an external call while conducting an internal call, you will hear the call waiting tone. If the number is transferred, you will see it or the name of the caller on the display.

- ▶ Rejecting a call: ▶ Press the display key **Reject**.
- ▶ Accepting a call: ▶ Press the display key **Accept**. You are now speaking to the new caller. The previous call is placed on hold.
Ending the current call and returning to the call on hold:
 - ▶ **Options** ▶  **End active call** ▶ **OK**.

Listening in to an external call

You are conducting an external call. An internal participant can listen in on this call and take part in the conversation (conference).


Prerequisite: The function **Listening In** is activated.

Activating/deactivating internal listening in

 ▶  ▶ **OK** ▶  **Telephony** ▶ **OK** ▶  **Listening In** ▶ **Change** (☑ = on)

Internal listening in

The line is engaged with an external call. Your screen will display information to that effect. You can listen in to the external call.

- ▶ **Hold down** . All participants hear a signal tone. Call waiting is not displayed.

Ending listening in

- ▶ Press . All participants hear a signal tone.

Phonebook (Address book)

In a **phonebook entry**, you can store first names and surnames, up to three numbers, an anniversary with a reminder, and caller melody.



You can create the directory (with up to 200 entries) individually for each of your handsets. You can also send lists/entries to other handsets (→ page 36).

Length of the entries



3 numbers: Max. 32 digits each
 First name and surname: Max. 16 characters each


Managing directory entries

Opening phonebook


Press the key  in idle status or, depending on the situation, the display key .

Creating a new entry



- ▶ Open directory. ▶  <New Entry> ▶ OK
- ▶ Switch between the input fields using  and enter the relevant components of the entry (names, numbers, anniversary, ringtone).
 Navigate downwards to display further components.
- ▶ Press the display key **Save**.

To create an entry, you must enter at least one number. If you have assigned a caller melody, the entry in the phonebook is supplemented with the symbol .

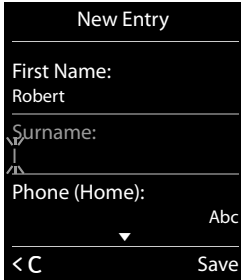


Example



Displaying/changing an entry

- ▶ Open phonebook. ▶  Select the desired entry.
 - ▶ **View** ▶ Display all components of the entry. ▶ **Edit**
- Or:
- ▶ **Options** ▶  **Edit entry** ▶ OK

Deleting an entry

- ▶ Open phonebook. ▶  Select the desired entry. ▶ **Options** ▶  **Delete entry** ▶ OK
- Delete **all** entries in the directory:
- ▶ Open phonebook. ▶ **Options** ▶  **Delete List** ▶ OK

Defining the order of the contacts entries

You can define whether the entries are to be sorted by first name or surname.

- ▶ Open phonebook. ▶ **Options** ▶ Press **Sort by Surname** or **Sort by First Name**.

If no name was entered, the default number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.



The sort order is as follows:

Space | Digits (0-9) | Letters (alphabetical) | Other characters


Displaying the number of entries that are available in the directory

▶ Open phonebook. ▶ Options ▶  Available Memory ▶ OK

Selecting a phonebook entry, searching in the phonebook

- ▶ Open phonebook.
- ▶ Scroll to the name you are searching for using . **Holding down**  scrolls continuously upwards or downwards through the phonebook.

Or:

- ▶ Enter the first few letters (max. 8 letters) using the keypad. The display jumps to the first name that begins with these letters. If necessary, scroll on to the desired entry using .

Transferring an entry/phonebook to another handset

Prerequisites:





- ◆ The sending and receiving handsets must both be registered to the same base.
- ◆ The other handset and the base can send and receive directory entries.

You can transfer the entire directory, an individual entry or several individual entries.

Notes

- ◆ An external call interrupts the transfer.
- ◆ Caller pictures and sounds are not transferred. Only the date is transferred for an anniversary.
- ◆ When transferring an entry between two vCard handsets:
If the recipient does not yet have an entry with that name, a new entry is created.
If there is already an entry with that name, this entry is expanded with the new numbers.
If the entry contains more numbers than the recipient permits, a further entry is created with the same name.
- ◆ If the recipient is not a vCard handset: A separate entry is created and sent for each number.
- ◆ Your handset receives entries from a non-vCard handset: Entries with numbers that are already stored are discarded, otherwise a new entry is created.





Transferring individual entries

▶ Open phonebook. ▶  Select the desired entry. ▶ Options
▶  Copy Entry ▶ OK ▶  to Internal ▶ OK ▶  Select the recipient handset. ▶ OK

After a successful transfer:




- ▶ Press **Yes** if you want to send another entry. Otherwise press **No**.

Transferring the entire directory



▶ Open phonebook. ▶  Select the desired entry. ▶ Options
▶  Copy List ▶ OK ▶  to Internal ▶ OK ▶  Select the recipient handset. ▶ OK

Transferring a displayed number to the phonebook

You can transfer numbers to the phonebook which are displayed in a list, e.g. the caller list, the redial list, as well as numbers that you have already selected or have entered for selection.





- ▶ The number is displayed or highlighted.
- ▶ Press display key  or **Options** ▶  **Copy to Directory.** ▶ **OK**
 - ▶ **<New Entry>** ▶ **OK** ▶  Select number type. ▶ **OK**
 - ▶ Complete the entry. ▶ **OK**

Or:

- ▶  Select entry. ▶ **OK** ▶  Select number type. ▶ **OK**
 - ▶ The number is entered or an existing number is overwritten (answer the prompt using **Yes/No**).
- ▶ **Save**






Transferring a number from the phonebook

In some operating situations, you can transfer a number from the phonebook, e.g. by dialling (even after the entry of a prefix).

- ▶ Depending on the operating situation, open the phonebook using  or .
- ▶  Select the phonebook entry. ▶ **OK**
- ▶ If more than one number is entered:  Select number. ▶ **OK**

Call list


 
 
 
 
 



Your telephone stores calls in various lists. Opening the lists:

- ◆ **Missed calls list:** Message key  ▶  **Missed Calls:** ▶ **OK**
- ◆ **List selection:**  ▶  ▶ **OK** ▶  **Select list.** ▶ **OK**


The last 20 entries are displayed in the call list.

List entry

The following information is displayed in the list entries:

- ◆ The list type (in the header row)
 - ◆ Icon for the type of entry:
 -  (Missed calls),  (Accepted calls),  (Outgoing calls)
 - ◆ Caller's number. If the number is stored in the phonebook, name and number type are displayed instead ( Phone (Home),  Phone (Office),  Phone (Mobile)). For missed calls, the number of missed calls from this number is also shown in square brackets.
 - ◆ Date and time of call (if set).
 - ▶  **Select entry.** ▶ **Options**
 - ▶ **View:** All available information is displayed, e.g. the corresponding number when a name is displayed.
 - ▶ **Options:** You can delete the entry or transfer the number to the phonebook (→ page 37).
- Calling back a caller from the call list:**
- ▶  **Select entry.** ▶ Press the Answer call key .

Example

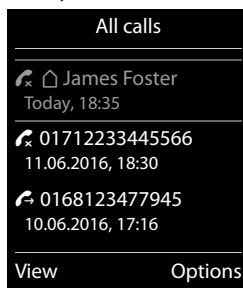


Contactability

Call forwarding (CF)

You can forward calls to another number. No call forwarding is activated yet or you want to change the current setting:




 ▶  ▶ OK ▶  Call Divert ▶ OK


▶ **Status:**  On / Off

Unknown is always displayed when calling up the menu.

▶ **To Phone Number:** Enter the number to which the call is to be forwarded.

▶ **When:**

-  **All Calls:** Calls are forwarded immediately. No more calls are signalled on your phone.
-  **No Answer:** Calls are forwarded if no one accepts the call within several rings.
-  **When Busy:** Calls are forwarded if your line is busy. Call is forwarded without a call waiting tone.

▶ **Send** ▶ Your provider is called and the corresponding code is sent. If the call forwarding has been changed, you will hear a confirmation on the phone line. ▶ 

Please note

Forwarding calls to your phone number can result in **additional costs**. Please consult your provider.

Calendar

You can remind yourself of up to **30 appointments**.

In the calendar, the current day is outlined in white; on days with appointments, the numbers are displayed in colour. When a day is selected, it will be highlighted.


May 2016						
Mo	Tu	We	Th	Fr	Sa	Su
		01	02	03	04	05
06	07	08	09	10	11	12
13	14	15	16	17	18	19
20	21	22	23	24	25	26
27	28	29	30	31		

Back OK

Saving appointments to the calendar

Prerequisite: Date and time are set (→ page 10).


 ▶  ▶ OK ▶ Calendar ▶ OK

▶  Select the desired day. ▶ OK

- ◆ Appointments that have already been stored are shown.
<New Entry> ▶ OK opens the window to enter an additional appointment.
- ◆ If no appointments have been entered, the data input window will open immediately to add the new appointment.

Activation:  On/Off

The following information can be added:

- ◆ **Date:** The selected day is preset. Enter new data to change.
 - ◆ **Time:** Time (hour and minute) of the appointment.
 - ◆ **Text:** Appointment name (e.g. dinner, meeting).
 - ◆ **Signal:**  Select the melody of the reminder signal or deactivate the acoustic signalling.
- ▶ Save

Signalling of appointments/anniversaries

Anniversaries are transferred from the phonebook and displayed as an appointment. An appointment/anniversary is displayed in idle status and signalled for 60 seconds with the selected ringtone.

You can deactivate the reminder call:


- ▶ Press **OFF** to acknowledge and end the reminder call.

When you are on the phone, a reminder call is indicated on the handset with a **single** advisory tone.




Displaying missed appointments/anniversaries


The following appointments and anniversaries are stored in the **Missed Alarms** list:

- ◆ The appointment/anniversary call was not acknowledged.
- ◆ The appointment/anniversary was signalled during a phone call.
- ◆ The handset was switched off at the time of the appointment/anniversary.

The last 10 entries are stored. The  icon and the number of new entries are shown in the display. The most recent entry appears at the head of the list.

To open the list: ▶ Message key  ▶  **Missed Alarms** ▶ OK

Or via the menu:  ▶  ▶ OK ▶  **Missed Alarms** ▶ OK

▶  scroll in the list if required

Information about the appointment/anniversary is displayed. You can:

- ▶ Delete an appointment/anniversary: **Delete**

Displaying/changing/deleting stored appointments

 ▶  ▶ OK ▶  **Calendar** ▶ OK ▶  Select the desired day. ▶ OK ▶ The appointment list is displayed. ▶  Select the desired appointment.

- ▶ **View:** Display appointment settings, change, if required using **Edit**.

Or:

- ▶ **Options:** Change settings or delete appointments.
 - **Edit entry** ▶ OK
 - **Delete entry** ▶ OK
 - **Activate/Deactivate** ▶ OK
 - **Delete all Appoints.** ▶ OK ▶ Confirm prompt with **Yes**.
All appointments for the **selected day** are deleted.




Alarm clock

Prerequisite: Date and time are set (→ page 10).


You can activate/deactivate and set the alarm clock as follows:

 ▶  ▶ OK ▶ Activation:  On/Off

▶ Changing the settings:

- **Time:** Set the hour and minute for the wake-up time (time setting → page 10).
- **Occurrence:**  **Daily/Monday-Friday**
- **Volume:**  Volume can be set at 5 levels or crescendo (increasing volume).
- **Melody:**  Select a ringtone for the alarm call.

▶ Press the display key **Save**.

When the alarm clock is activated, the icon  and the alarm time is displayed in idle status.

An alarm call is signalled in the display and with the selected ringtone for a maximum of 60 seconds. During a call, the wake-up call is only signalled by a short tone.

Deactivating the alarm call/repeating after a pause (snooze mode)

Prerequisite: One alarm call sounds.

▶ **Deactivating until the next alarm call:** Press **OFF**.

Or:


▶ **Snooze mode:**

Press **Snooze** or any key. The wake-up call is deactivated and then repeated after 5 minutes.

Or:

Press nothing. The alarm call is deactivated after 60 seconds and then repeated after 5 minutes. After the fourth repetition, the alarm call is deactivated for 24 hours.

Example

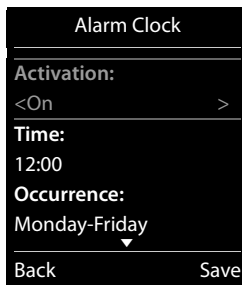

Baby monitor

When the baby monitor is switched on, the stored (internal or external) destination number is called as soon as a defined noise level is exceeded in the vicinity of the handset. The baby monitor alarm to an external number is cancelled after approximately 90 seconds.

In baby monitor mode, incoming calls are only signalled on the display (**without ringtone**). The display backlight is reduced to 50%. Advisory tones are deactivated. All keys are locked, with the exception of the display keys and pressing the middle of the control key.

You can answer the baby monitor alarm using the **Two Way Talk** function. Deactivate/activate the speaker of the handset with this function.

If you accept an incoming call, the baby monitor mode is suspended for the duration of the call, but the function **remains** activated. The baby monitor mode is not deactivated by switching the handset off and on again.

Caution

Ensure the following points:

- ◆ The handset should be positioned 1 to 2 metres away from the baby. The microphone must be pointed towards the baby.
- ◆ Activating the function reduces the operating time of your handset. If necessary, place the handset in the charger.
- ◆ The baby monitor is activated 20 seconds after switching on.

Please always check the functionality when you switch on:

- ◆ Test the sensitivity.
- ◆ Check the connection if you are forwarding the baby monitor alarm to an external number.
- ◆ Make sure that the answer machine at the target number is switched off.

Activating/deactivating and setting the baby monitor

▶ ▶ OK ▶ Baby Monitor ▶ OK

▶ **Activation:** On/Off

▶ Setting the baby monitor:

- **Send alarm to:** **Internal** (at least 2 handsets are registered)/ **External**
If **Internal** is selected:
 - ▶ **Handset:** Press the **Change** display key. ▶ Select handset. ▶ OK
 - If **External** is selected:
 - ▶ **Number:** Enter the number directly or select from the phonebook (press the display key).
- **Two Way Talk:** On/Off
- **Sensitivity:** High/Low

▶ **Save**

The target number is displayed in idle status when the baby monitor alarm is activated. The baby monitor is deactivated using the **OFF** display key.

Cancelling the baby monitor alarm

Cancelling during a baby monitor alarm: Press .


Deactivating the baby monitor remotely

Prerequisites: The baby monitor alarm is forwarded to an external destination number. The recipient's phone supports tone dialling.

▶ Accept the baby monitor alarm and press the keys.

The call is ended. The baby monitor is deactivated and the handset is in idle status.

Baby monitor activated

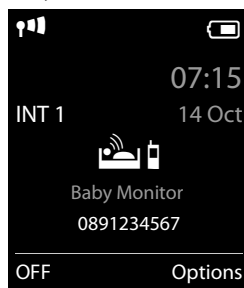

Operating the telephone on a router/PABX

Operation with a router

When operating on the analogue connection of a router, potentially occurring **echoes** can be reduced by switching on **XES mode 1***. If **XES mode 1** does not suppress the echoes sufficiently, you can activate **XES mode 2**.

If there are no problems with echoes, the normal mode (factory settings) should be activated.

- ▶ ▶ * 0 | ##-> 0 3 | 5 3A 3A | ##-> 7 7PFR PQMR | 0 3 |
- ▶ ▶ **OK** (for normal mode)
 - ▶ ▶ **OK** (for XES mode 1)
 - ▶ ▶ **OK** (for XES mode 2)

Operation with a PABX

To find out which settings are required for your PABX, please refer to the PABX user guide.

Dialling modes and flash time

Changing the dialling mode

- ▶ ▶ **OK** ▶ **Telephony** ▶ **OK** ▶ **Dialling Mode** ▶ **OK** ▶ **Select tone dialling (Tone)/ pulse dialling (Pulse)** ▶ **Select** (● = selected)

Setting flash time

- ▶ ▶ **OK** ▶ **Telephony** ▶ **OK** ▶ **Recall** ▶ **OK** ▶ **Select flash time** ▶ **Select** (● = selected)

Saving an access code (outside line code)

If you have to enter an access code before any external number on your PABX, e.g., "0":

- ▶ ▶ **OK** ▶ **Telephony** ▶ **OK** ▶ **Access Code** ▶ **OK** ▶ **Access external line with:** Enter access code (max. of 3 characters).

▶ For:

Off: Deactivate access code.

Or:

Call Lists: The access code should only be prefixed when dialling from one of the following lists: missed call list, accepted call list.



 

Or:

All calls: The access code should be prefixed to every number.

▶ **Save**

* XES stands for "eXtended Echo Suppression".

Setting pauses

Menu key  ▶ *  # $+$ 0  5  # $+$ ▶ Then enter one of the following function-specific codes:

◆ **Pause after line seizure:**

   ▶   ▶ OK (for 1 sec.)

   ▶   ▶ OK (for 3 secs.)

   ▶   ▶ OK (for 7 secs.)

◆ **Pause after Recall key:**

   ▶   ▶ OK (for 800 ms)

   ▶   ▶ OK (for 1600 ms)

   ▶   ▶ OK (for 3200 ms)

◆ **Dialling pause** (Pause after access code):


   ▶   ▶ OK (for 1 sec.)

   ▶   ▶ OK (for 2 secs.)

   ▶   ▶ OK (for 3 secs.)


   ▶   ▶ OK (for 6 secs.)

To enter dialling pause when dialling:

Hold down the Recall key  . A P appears in the display.

Switching temporarily to tone dialling (Tone)

After dialling the external number or after establishing the connection:

▶ Press the star key  **briefly.**







 



Or:












▶ **Options** ▶  **Tone Dialling** ▶ **OK**

Display icons




Icons in the status bar




The following icons are displayed in the status bar depending on the settings and the operating status of your telephone:

Icon	Meaning
	Signal strength (No Radiation off)
	76% - 100%
	51% - 75%
	26% - 50%
	1% - 25%
	Red: no connection to the base
	No Radiation activated: white, if Maximum Range is on; green, if Maximum Range is off
	Ringtone deactivated
	"Beep" ringtone activated
	Key lock

Icon	Meaning
	Battery charge status:
	White: charged over 66%
	White: charged between 34 and 66%
	White: charged between 11 and 33%
	Red: charged below 11%
	Flashes red: battery almost empty (approx. 5 minutes talktime remaining)
	Battery is charging (current charge status):
	0% - 10%
	11% - 33%
	34% - 66%
	67% - 100%

 Menu icons

 

	Alarm Clock
	Call Lists
	Answer Machine



	Select Services
	Additional Features
	Settings

Display icons

Display key icons

The following icons indicate the current function of the display keys according to the operating situation:

Icon	Action
	Last number redial
	Deleting text

Icon	Action
	Opening phonebook
	Copy number to the phonebook

Display icons for signalling of



Establishing a call
(outgoing call)



Connection
established



No connection
established/connection
terminated



External call



Internal call



Reminder call for
anniversary



Reminder call for
appointment



Alarm call

Other display icons



Information



(Security) prompt



Please wait...



Action complete
(green)



Action failed (red)

Menu tree

Opening the main menu: Press  whilst the telephone is in idle status.

Note

Not all functions described in this user guide are available in all countries or with all network providers.



Alarm Clock

→ page 42



Call Lists

All calls	→ page 38
Outgoing calls	→ page 38
Accepted calls	→ page 38
Missed calls	→ page 38



Answer Machine

Play Messages	Network Mailbox	→ page 31
Network Mailbox		



Select Services

Call Divert	→ page 39
Call Waiting	→ page 21
Network Mailbox	→ page 31



Additional Features

Calendar	→ page 40
Baby Monitor	→ page 43
One Touch Call	→ page 19
Missed Alarms	→ page 41



Settings

Date/Time	→ page 10
Audio Settings	Handset Volume → page 20
	Earpiece Profiles → page 25
	Advisory Tones → page 26
	Ringtones (Handset) → page 25
	Music on hold → page 26
Display	Screensaver → page 23
	Colour Schemes → page 23
	Backlight → page 24
Language	→ page 23
Registration	Register Handset → page 32
	De-register Handset → page 33
	Select Base → page 32
Telephony	Auto Answer → page 24
	Area Codes → page 23
	Listening In → page 34
	Access Code → page 45
	Dialling Mode → page 45
	Recall → page 45
System	Reset Handset → page 29
	Base Reset → page 29
	Encryption → page 28
	System PIN → page 29
ECO DECT	Maximum Range → page 30
	No Radiation → page 30

Customer Service & Assistance

Step by step towards your solution with Gigaset Customer Care www.gigaset.com/service



Visit our Customer Care pages:

www.gigaset.com/service

Here you will find:

- ◆ Frequently asked questions
- ◆ Free software and user manual downloads
- ◆ Compatibility checks



Contact our Customer Care staff:

Couldn't find a solution in the FAQs section?

We are happy to help...

... by eMail: www.gigaset.com/contact

... by telephone:

Service Greece +30 2111 98 1778

(0.026 € per minute from the Greek phone network. For calls from mobile phone networks, other prices may apply.)

Please have your proof of purchase ready when calling.

Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product).


 
In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased.

Questions and answers

If you have any queries about the use of your telephone, suggested solutions are available on our web-site at

www.gigaset.com/service ▶ FAQ ▶ First steps for troubleshooting.

The table below also lists steps for troubleshooting.

<p>The display is blank.</p> <ol style="list-style-type: none">1. The handset is not activated.<ul style="list-style-type: none">▶ Hold down .2. The battery is empty.<ul style="list-style-type: none">▶ Charge the battery or replace it (→ page 7).3. The key and display lock is activated.<ul style="list-style-type: none">▶ Hold down the hash key .
<p>"No Base" flashes on the display.</p> <ol style="list-style-type: none">1. The handset is outside the range of the base.<ul style="list-style-type: none">▶ Move the handset closer to the base.2. The base is not activated.<ul style="list-style-type: none">▶ Check the base power adapter.3. The base's range is reduced because Maximum Range is deactivated.<ul style="list-style-type: none">▶ Activate Maximum Range (→ page 30) or reduce the distance between the handset and base.
<p>"Please register handset" or "Place handset in base" flashes on the display.</p> <p>The handset has not yet been registered or was de-registered due to the registration of an additional handset (more than six DECT registrations).</p> <ul style="list-style-type: none">▶ Register the handset again (→ page 32).
<p>The handset does not ring.</p> <ol style="list-style-type: none">1. The ringtone is deactivated.<ul style="list-style-type: none">▶ Activate ringtone (→ page 25).2. Call forwarding is set.<ul style="list-style-type: none">▶ Deactivate call forwarding (→ page 39).3. The phone does not ring if the caller has withheld his number.<ul style="list-style-type: none">▶ Activate the ringtone for unknown calls (→ page 26).4. The phone does not ring during a specific period or for certain numbers.<ul style="list-style-type: none">▶ Check time control for external calls (→ page 26) .
<p>You cannot hear a ringtone/dialling tone from the fixed line network.</p> <p>The phone cord supplied has not been used or has been replaced by a new cord with the wrong pin connections.</p> <ul style="list-style-type: none">▶ Please always use the phone cord supplied or ensure that the pin connections are correct when purchasing from a retailer (→ page 58).
<p>The connection always terminates after approx. 30 seconds.</p> <p>A repeater (prior to Version 2.0) has been activated or deactivated (→ page 28).</p> <ul style="list-style-type: none">▶ Switch the handset off and back on again (→ page 14).
<p>Error tone sounds after system PIN prompt.</p> <p>You have entered the wrong system PIN.</p> <ul style="list-style-type: none">▶ Repeat the process, reset the system PIN to 0000 if required (→ page 29).
<p>Forgotten system PIN.</p> <ul style="list-style-type: none">▶ Reset the system PIN to 0000 (→ page 29).

The other party cannot hear you.

The handset is "muted".

- ▶ Activate the microphone again (→ page 20).

The caller's number is not displayed.

1. **Calling Line Identification (CLI)** is not approved for the caller.
 - ▶ The **caller** should ask the network provider to enable Calling Line Identification (CLI).
2. **Caller display (CLIP)** is not supported by the network provider or is not enabled for you.
 - ▶ Caller display (CLIP) is enabled by the network provider.
3. Your telephone is connected via a PABX or a router with an integrated PABX (gateway) that does not transmit all information.
 - ▶ Reset the system: Briefly pull out the power plug. Reinsert the plug and wait until the device restarts.
 - ▶ Check the settings on the PABX and activate phone number display, if necessary. To do this, search for terms such as CLIP, calling line identification, phone number identification, caller ID, etc. in the system's user guide or ask the system manufacturer.

You hear an error tone when keying an input.

Action has failed/invalid input.

- ▶ Repeat the process.
Read the display and refer to the user guide if necessary.

You cannot listen to messages on the network mailbox.

Your PABX is set to pulse dialling.

- ▶ Set your PABX to tone dialling.

Authorisation

This device is intended for analogue phone lines in the Greek telephone net.

Country-specific requirements have been taken into consideration.

Hereby, Gigaset Communications GmbH declares that the radio equipment type Gigaset C530 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: www.gigaset.com/docs.

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

Guarantee Certificate

Without prejudice to any claim the user (customer) may have in relation to the dealer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (e.g., batteries, keypads, casings), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the equipment defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- ◆ This Guarantee shall not extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- ◆ This Guarantee shall apply to new devices purchased in the European Union. The Guarantee is issued by Gigaset Communications Austria GmbH, Businesspark Marximum Objekt 2 / 3.Stock, Modecenterstraße 17, 1110 Vienna, Austria.
- ◆ Any claims that differ from or extend beyond these mentioned in this manufacturer's warranty shall be excluded, except from cases expressly specified in the applicable law. (In no event shall Gigaset Communications be liable for any loss of business, profits or data, additional software loaded by the customer or other information. The customer shall also bear the responsibility for the creation of backup copies of their files. The limitation of liability shall not apply if and to the extent liability is mandatory under the applicable law, e.g. according to product liability law or in the event of intentional misconduct, severe negligence, personal injury, damage to parts of the human body or to personal health, or in case of violations of conventional obligations. However, the claims for damages related to violation of conventional obligations shall be limited to predictable damages, representative of such conventions, as long as there is no intention or severe negligence, personal injury, damage to parts of the human body or to personal health, according to the product liability law.)
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions do not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications telephone service. The relevant number is to be found in the accompanying user guide.

Exclusion of liability

Your handset display has a resolution of pixels. Each pixel consists of three sub-pixels (red, green, blue).

It may be the case that a pixel is incorrectly controlled or has a colour deviation.

This is normal and no reason for a warranty claim.

The following table shows the number of pixel errors that may occur without leading to a warranty claim.

Description	Maximum number of permitted pixel errors
Colour illuminated sub-pixels	1
Dark sub-pixels	1
Total number of coloured and dark sub-pixels	1



Signs of wear on the display and housing are excluded from the warranty.

Environment

Our environmental mission statement

We, Gigaset Communications GmbH, bear social responsibility and are actively committed to a better world. Our ideas, technologies and actions serve people, society and the environment. The aim of our global activity is to secure sustainable life resources for humanity. We are committed to a responsibility for our products that comprises their entire life cycle. The environmental impact of products, including their manufacture, procurement, distribution, utilisation, service and disposal, are already evaluated during product and process design.

Further information on environmentally friendly products and processes is available on the Internet at www.gigaset.com.

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.



If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2012/19/EU.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority or your refuse collection service.

Appendix

Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

Never use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid

If the device comes into contact with liquid:

- 1** Disconnect the power supply.
- 2** Remove the batteries and leave the battery compartment open.
- 3** Allow the liquid to drain from the device.
- 4** Pat all parts dry.
- 5** Place the device in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)** with the battery compartment open and the keypad facing down (if applicable).
- 6** Do not switch on the device again until it is completely dry.

When it has fully dried out, you will normally be able to use it again.

Technical data

Batteries

Technology: 2 x AAA NiMH
 Voltage: 1.2 V
 Capacity: 800 mAh

Handset operating times/charging times

The operating time of your Gigaset depends on the capacity and age of the battery and the way it is used. (All times are maximum possible times).

Standby time (hours) *	320 * 170 **
Talktime (hours)	14
Operating time for 1.5 hours of calls per day (hours) *	130 * 100 **
Charging time in base (hours)	8.5
Charging time in charging cradle (hours)	7.5

* No Radiation deactivated, without display backlight in idle status

** No Radiation activated, without display backlight in idle status

Base power consumption

In standby mode

– Handset in charging cradle approx. 1.0 W

– Handset outside charging cradle approx. 0.5 W


During a call approx. 0.65 W

General specifications

DECT

DECT standard	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1900 MHz
Duplex method	Time division multiplexing, 10 ms frame length
Repetition frequency of the transmission pulse	100 Hz
Duration of the transmission pulse	370 µs
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW average power per channel, 250 mW pulse power
Range	Up to 50 m indoors, up to 300 m outdoors
Base power supply	230 V ~/50 Hz
Environmental conditions for operation	+5°C to +45°C, 20% to 75% relative humidity
Dialling mode	DTMF (tone dialling)/PD (pulse dialling)

Pin connections on the telephone jack

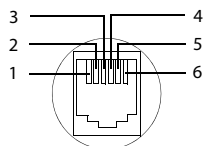

1 unused
2 unused
3 a
4 b
5 unused
6 unused

Character charts

Greek

Press the relevant key the number of times indicated.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x
1 \square	1											
2 \square ABC	α	β	ά	2	a	b	c					
3 \square DEF	δ	ε	φ	έ	3	d	e	f				
4 \square GHI	γ	η	ι	ή	i	ï	ĩ	4	g	h	i	
5 \square JKL	κ	λ	5	j	k	l						
6 \square MNOP	μ	ν	ο	ω	ό	ώ	6	m	n	o		
7 \square PQRS	π	ρ	ς	σ	ψ	7	p	q	r	s		
8 \square TUV	θ	τ	8	t	u	v						
9 \square WXYZ	ζ	ξ	υ	χ	ύ	ü	ÿ	9	w	x	y	z
0 \square	\square ¹⁾	.	,	?	!	\square ²⁾	0					

1) Space

2) Line break

Accessories

Upgrade your Gigaset to a cordless PABX:

Gigaset Handset C620H

- ◆ Brilliant sound quality in handsfree mode
- ◆ 1.8" TFT colour display
- ◆ Directory for 250 entries
- ◆ Talk/standby time of up to 26 hrs/530 hrs, standard batteries
- ◆ Brilliant sound quality in speaker mode: 4 adjustable handsfree profiles
- ◆ Screensaver (analogue and digital clock)
- ◆ ECO-DECT
- ◆ Alarm clock
- ◆ Calendar with appointment scheduler
- ◆ Night mode with time-controlled ringtone deactivation
- ◆ No interruptions from anonymous calls
- ◆ Black list for 15 unwanted numbers
- ◆ Baby monitor, one touch call

www.gigaset.com



Gigaset Handset E630H

- ◆ Brilliant sound quality in handsfree mode
- ◆ Side keys for easy volume control
- ◆ 1.8" TFT colour display
- ◆ Splashproof
- ◆ Simple Auto Answer with any key
- ◆ Directory for 200 entries
- ◆ Talk/standby time of up to 20 hrs/250 hrs, standard batteries
- ◆ Torch function
- ◆ LED light call display
- ◆ Profile key for quick adjustment to the surroundings
- ◆ Screensaver (analogue and digital clock)
- ◆ ECO-DECT
- ◆ Alarm clock
- ◆ Calendar with appointment scheduler
- ◆ Night mode with time-controlled ringtone deactivation
- ◆ No interruptions from anonymous calls
- ◆ Baby monitor, one touch call

www.gigaset.com



Gigaset Handset C430H-C530H

- ◆ Brilliant sound quality in handsfree mode
- ◆ 1.8" TFT colour display
- ◆ Directory for 200 entries
- ◆ Talk/standby time of up to 20 hrs/250 hrs, standard batteries
- ◆ Screensaver (analogue and digital clock)
- ◆ ECO-DECT
- ◆ Alarm clock
- ◆ Calendar with appointment scheduler
- ◆ Night mode with time-controlled ringtone deactivation
- ◆ No interruptions from anonymous calls
- ◆ Baby monitor, one touch call

www.gigaset.com



L410 handsfree clip for cordless telephones

- ◆ Complete freedom of movement when making calls
- ◆ Practical clip fastening
- ◆ Perfect sound quality in handsfree mode
- ◆ Simple call transfer from handset
- ◆ Weight approx. 30 g
- ◆ ECO-DECT
- ◆ 5 volume settings
- ◆ LED status display
- ◆ Talk/standby time of up to 5 hrs/120 hrs
- ◆ Ranges in buildings up to 50 m, outdoors up to 300 m

www.gigaset.com



ZX300 Headset

- ◆ Perfect voice quality
- ◆ Optimum wear comfort
- ◆ Weight approx. 12 g

www.gigaset.com



ZX400 Headset

- ◆ Perfect voice quality
- ◆ Optimum wear comfort
- ◆ Weight approx. 75 g

www.gigaset.com



Gigaset Repeater/Gigaset Repeater 2.0

You can use the Gigaset Repeater to increase the receiving range between your Gigaset handset and the base.

www.gigaset.com



Compatibility

You can find more information about the handset functions in connection with the individual Gigaset base stations at:

www.gigaset.com/compatibility

All accessories and batteries are available from your phone retailer.



Use only original accessories. This will avoid possible health risks and personal injury, and also ensure that all the relevant regulations are complied with.

Index

- A**
- Access code (PABX) 45
 - Accessories 59
 - Activating
 - message LED 24
 - Address book, see Phonebook
 - Advisory tones 26
 - Alarm clock 42
 - Alert tone (beep) 25
 - Anniversary 35
 - displaying missed 41
 - Anonymous 20
 - Anonymous calls off 26
 - Answer call key 1
 - Appointment
 - displaying missed 41
 - Area code
 - setting own area code 23
 - Assigning number key 27
 - Authorisation 53
 - Auto Answer 24
- B**
- Baby monitor 43
 - Backlight, display 24
 - Base
 - changing 32
 - changing name 32
 - changing system PIN 29
 - connecting to power/
 - telephone network 6
 - restoring to default setting 29
 - setting up 5
 - wall mounting 6
 - Base station
 - changing the settings 23
 - Battery
 - charging 8
 - charging status 47
 - display 1
 - icon 1
 - inserting 7
 - Beep (alert tone) 25
 - Best base 32
 - Birthday, see Anniversary
- C**
- Call
 - accepting 19
 - accepting automatically 24
 - external 18
 - internal 33
 - participant listening in 34
 - transferring (connecting) 33
 - transferring internally (connecting) 33
 - Call forwarding (CF) 39
 - Call lists 38
 - deleting an entry 38
 - Call protection 26
 - Call redirection 39
 - Call swapping
 - two external calls 22
 - Call waiting
 - external call 21
 - external during an internal call 19, 34
 - internal during an external call 19, 34
 - Calling
 - external 18
 - internal 33
 - Calling Line Identification 20
 - Care 56
 - Care of the device 56
 - CF, see Call forwarding
 - Changing
 - dialling mode 45
 - display language 9
 - name of the handset 33
 - phone settings 23
 - settings 23
 - system PIN 29
 - Character charts 58
 - Charge status indicator 1
 - Charge status of the batteries 47
 - Charging cradle (handset)
 - setting up 5
 - Charging time of handset 57
 - CLIP 20
 - Colour scheme 23
 - Conference call
 - two external calls 22
 - Connecting the base station
 - to the PABX 45
 - to the router 45
 - Connecting the headset 11

Connections with the base	32
Consultation call	
ending	22
external	22
internal	33
Contact with liquid	56
Contactability	39
Contents of the package	5
Control key	1, 14
Correcting incorrect entries	17
Correction of incorrect entries	17
Customer Care	51
Customer Service & Assistance	51

D

Deactivating	
baby monitor	44
internal listening in	34
message LED	24
network mailbox	31
wireless module	30
Default setting	29
De-registering (handset)	33
De-registering the handset	33
Dialling	
from the call list	18
using speed dial	27
using the redial list	18
with directory	19
Dialling pause	46
Directory	
saving entry	35
Display	
activating/deactivating new message ..	24
backlight	24
changing display language	9
colour scheme	23
network mailbox message	16, 31
number (CLI/CLIP)	20
phonebook memory	36
screensaver	23
setting	23
setting the backlight	24
Display icons	47
Display keys	1, 15
assigning	27
icons	48
Displays	
missed appointments/anniversaries ..	41
Disposal	56
DTMF (tone dialling)	45, 46

E

Earpiece profile	25
Earpiece volume	20
Echo	45
ECO DECT	30
Eco mode + (deactivating wireless module)	30
Emergency numbers	
not possible	4
End call key	1
End call/End key	18
Ending a conference call	34
Entering special characters	17
Entering special letters	17
Entering text	17
Entering umlauts	17
Environment	55
Exclusion of liability	55
External	20
External call	
call waiting	21
transferring internally (connecting) ..	33
External calls	
time control for ringtone	26

F

Factory settings	29
Field strength	47
Flash time	45

G

Getting started	5
Guarantee Certificate	54

H

Handset	
advisory tones	26
changing name	33
changing the settings	23
changing to a different base	32
changing to best reception	32
colour scheme	23
display backlight	24
display language	9, 23
earpiece volume	20
idle status	16
list	14
muting	20
paging	33
registering on another base	32
restoring to default setting	29
screensaver	23

- searching for 33
 - setting 23
 - setting up 7
 - speaker volume 20
 - switching on/off 14
 - transferring a call 33
 - use as a baby monitor 43
 - using multiple 32
 - Handsfree mode 20
 - Handsfree volume 20
 - Hash key 1
 - Headset socket 11
 - Hearing aids 4
 - Help 52
 - Hold music 26
- I**
- Icon
 - alarm clock 42
 - Icons
 - displaying new messages 16
 - on display keys 48
 - status bar 47
 - Idle status, returning to 16
 - Internal
 - listening in 34
 - making calls 33
 - Internal call 33
 - call waiting 19, 34
 - Internal consultation call 33
- K**
- Key
 - assigning to a function or number 27
 - Key 1 (fast access) 1
 - Keys
 - Answer call key 1
 - control key 1, 14
 - display keys 1, 15
 - End call key 1
 - End call/End key 18
 - fast access 1
 - Hash key 1
 - Message key 1
 - On/off key 1
 - Recall key 1
 - Star key 1
- L**
- Language
 - display 9
 - Liquid 56
 - List
 - accepted calls 38
 - call lists 38
 - handsets 14
 - missed calls 38
 - outgoing calls 38
 - List entry 38
 - Listening in to an external call 34
 - Locking/unlocking the keypad 14
 - Lower/upper case 17
- M**
- Making calls
 - accepting a call 19
 - external 18
 - internal 33
 - Managing the calendar 40
 - Marked characters 17
 - Medical equipment 4
 - Melody
 - ringtone for internal/external calls 25
 - Memory in the phonebook 36
 - Menu
 - opening 14
 - tree 49
 - Message key 1
 - Message lists 16
 - opening 16
 - Microphone 1
 - Missed anniversaries/appointments 41
 - Missed call 38
 - Mounting the base on the wall 6
 - Muting the handset 20
- N**
- Network mailbox 31
 - Network services
 - during an external call 21
 - provider-specific 21
 - setting 21
 - Number
 - copying to the phonebook 37
 - displaying caller's number (CLIP) 20
 - entering 17
 - entering with the phonebook 37

- O**
- On/off key 1
 - One touch call 19
 - Operating time of handset 57
 - Order in the phonebook 35
 - Outside line code 45
 - Outside line code (PABX) 45
- P**
- PABX**
- connecting base 45
 - pauses 46
 - saving access code 45
 - setting dialling mode 45
 - setting flash time 45
 - switching to tone dialling 46
- Paging 33
- Pause
- after access code 46
 - after line seizure 46
 - after Recall key 46
- PD (pulse dialling) 45
- Phone
- restoring to default setting 29
 - setting 23
- Phone number display, notes 20
- Phonebook 35
- copying number from text 37
 - opening 14
 - order of entries 35
 - sending entry/list to handset 36
 - sending to handset 36
 - using to enter numbers 37
- Pin connections 58
- Power adapter 4
- Power consumption 57
- Protection against unwanted calls 26
- Protection from anonymous callers 26
- Pulse dialling 45
- Q**
- Questions and answers 52
- R**
- Range 5
 - reducing 30
 - Recall key 1, 46
 - Reception booster, see Repeater
 - Redial list 18
 - Redirect, see Call forwarding
 - Reducing radiation 30
 - Reducing transmission power 30
 - Registering (handset) 32
 - Registering other Gigaset handsets 32
 - Registering the handset 32
 - Repeater 28
 - Restoring to default setting 29
 - Restoring to factory settings 29
 - Ringtone
 - changing 25
 - melody for internal/external calls 25
 - silencing for anonymous calls 26
 - time control for external calls 26
 - Ringtones 25
 - Router
 - connecting base station 45
- S**
- Safety precautions 4
 - Saving a number in the directory 35
 - Screensaver 23
 - Searching
 - handset 33
 - in directory 36
 - Selecting an entry from the phonebook 36
 - Sending
 - phonebook entry to handset 36
 - Setting an appointment 40
 - Setting options
 - phone 23
 - Setting the date 10, 50
 - Setting the display language 23
 - Setting the time 10, 50

Index

- Setting up
 - handset 7
- Signal tone, see Advisory tones
- Snooze mode (alarm) 42
- Sound, see Ringtone
- Speaker 20
- Speed dial 27
- Star key 1
- Status bar 1
 - icons 47
- Switching microphone (handset) on/off . . . 20
- System PIN
 - changing 29
 - resetting 29
- T**
- Technical data 57
- Telephone
 - operating 14
- Telephone jack, pin connections 58
- 3-way conference call
 - two external calls 22
- Three-way conference call
 - ending 34
- Time control
 - ringtone for external calls 26
- Tone dialling (DTMF) 45, 46
- Transferring an external call internally . . . 33
- Troubleshooting
 - general 52
- U**
- Unknown 20
- Upper/lower case 17
- V**
- Viewing network mailbox message . . . 16, 31
- VIP ringtone 35
- Volume
 - handset handsfree/earpiece volume . . . 20
- W**
- Warning tone, see Advisory tones
- X**
- XES mode 45

Issued by
Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2016
Subject to availability.
All rights reserved. Rights of modification reserved.
www.gigaset.com