



Current / Voltage - Frequency Converter Z104

GENERAL FEATURES

The current/frequency converter Z104 transforms the current or voltage input signal into a series of pulses of constant duration.

A typical use is when, with a flow meter featuring an analogue output (example 4-20mA), the flow must be totalized.

- current input 0 - 20 mA or 4 - 20 mA with active or passive connection;
- supply of the sensor with 2-wire method: 20VDC stabilized, max. 20mA protected against short-circuiting.
- input in voltage 0 - 5 Vdc, 1 - 5 Vdc, 0 - 10 Vdc and 2 - 10 Vdc;
- integration constant, programmable in the range 1 pulse every 2 hours to 10 KHz;
- straightforward setting, can be performed using a digital multimeter;
- output on npn open-collector transistor and on reed-relay;
- power ON and relay pick-up indicator on front panel;
- 3-point insulation: 1500Vac.

TECHNICAL FEATURES

Power supply :	19 - 40 Vdc, 19 - 28 Vac 50 - 60 Hz, max 2.5 W		
Current input :	0 - 20 mA or 4 - 20 mA, both active and passive connection. Active connection : loop supply voltage approx. 15 Vdc Passive connection : input impedance 100 ohm.		
Voltage input :	0 - 5 Vdc, 1 - 5 Vdc, 0 - 10 Vdc and 2 - 10 Vdc, Input impedance 1 Mohm.		
Output :	Npn open-collector transistor 30 Vdc 300 mA Reed-relay 30 Vdc-sc 100 mA.		
Environmental conditions :	Temperature: 0..50°C, Humidity min.:30%, max. 90% at 40°C non condensing (also see section entitled <i>Installation instructions</i>).		
Errors referred to the input's range of measurement :	Calibration: 0,2 %	Temp. coefficient: 0,02 % / °C	Linearity: 0,05 %
Input protection :	continuous 100mA current.		
Output/supply protection :	against impulse overvoltage 400W/ms.		

Standards :



The instrument conforms to the following standards:
EN50081-2 (electromagnetic emissions, industrial environment)
EN50082-2 (electromagnetic immunity, industrial environment)
EN61010-1 (safety)

HOW TO INSTALL

Z104 module is designed to be mounted on a DIN 46277 bar, in vertical position. To obtain an optimal working and duration, it is necessary to assure an adequate ventilation to modules, avoiding to place raceways or other objects that can close abat-vents.

Avoid to mount modules over devices that generate heat; we suggest to mount devices in the lower side of the panel.

HEAVY WORKING CONDITIONS:

Heavy working conditions are:

- *High power voltage a (> 30Vdc / > 26 Vac)*
- *Input sensor feeded.*

When modules are put side by side it is possible that it is **necessary to separate them at least 5 mm** in the following cases:

- Upper board temperature higher than 45°C and at least one of the heavy working conditions verified.
- Upper board temperature higher than 35°C and at least two of the heavy working temperature verified.

INPUT SIGNAL SETUP

Set the DIP-switches marked «INPUT» as indicated in the following table 1:

Current 0 - 20 mA		Voltage 0 - 10 Vdc	
Current 4 - 20 mA		Voltage 2 - 10 Vdc	
Voltage 0 - 5 Vdc		SETTING position	
Voltage 1 - 5 Vdc		Table 1	

SETTING (FOR EXPERT TECHNICAL PERSONNEL ONLY): **THE INSTRUMENT CAN BE SUPPLIED FACTORY SET ON REQUEST.**

The instrument can be set using a common digital tester following the procedure explained below:

If the number of pulses/hour to be totalized is P, the scale including the number P must be chosen from the following table and the «RANGE» DIP-switches set to the corresponding position given in table 2 :

FS - IS		FS - IS	
36.000.000 - 8.400.000		2.197,27 - 513	
9.000.000 - 2.100.000		549,32 - 129	
2.250.000 - 525.000		137,33 - 33	
562.500 - 131.250		34,33 - 8	
140.625 - 32.813		8,58 - 2	
35.156,25 - 8.204		2,15 - 0,5	
8.789,06 - 2.051		Table 2	

Connect a tester set to the range 10VDC to terminals 1 (-) and 5(+).

With the input signal disconnected, set the «INPUT» DIP-switches to the SETTING position:

Turn the setting trimmer until the reading corresponds to the value given by the formula:

$$\text{Voltage reading} = \frac{10 \times P \times K}{FS}$$

Where:

P is the number of pulses/hour to be totalized

K is a setting constant (featured on the instrument's label)

FS is the top of the scale selected in table 2.

When you have finished, reset the «INPUT» DIP-switches (see table 1) to the position corresponding to the output of your sensor.

Example: in order to totalize 90 pulses / hour, set the «RANGE» DIP-switches (on the upper panel) to the configuration given in table 2.

Set the four «INPUT» DIP-switches to the SETTING position.

Turn the setting trimmer until the voltage reading is:

$$\text{Voltage reading} = \frac{10 \times 90 \times 1,05}{137,33} = 6,881 \text{ Vdc}$$

In previous formula 1,05 we put factor K printed on the device's label.

When you have finished, reset the «INPUT» DIP-switches (see table 1) to the position corresponding to the output of your sensor.


ELECTRICAL CONNECTIONS

We recommend to use shielded cables to do signals connection; monitor must be connected to a preferential ground for devices. Besides it is a good rule avoid to pass wires near power installation cables like inverters, motors, induction furnaces etc.

POWER SUPPLY

$$19 \div 28 \text{ V} \sim$$

$$19 \div 40 \text{ V} =$$

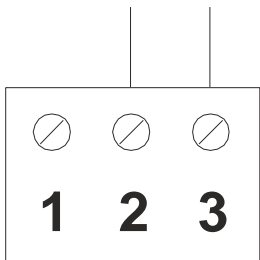


Power voltage must be in a range from 19 to 40 Vdc (indifferent polarity), from 19 to 28 Vac; see also section **INSTALLATION NORMS**.

Upper limits must not be exceeded, if it happen there could be damages for module.


It is necessary to protect power source from possible module's failure by fuse correctly dimensioned.

INPUTS


Current with internal Loop power supply

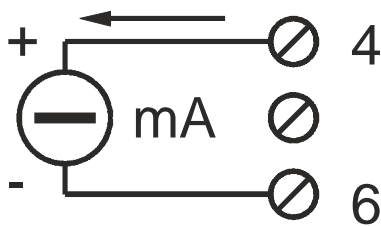

Current with external Loop power supply

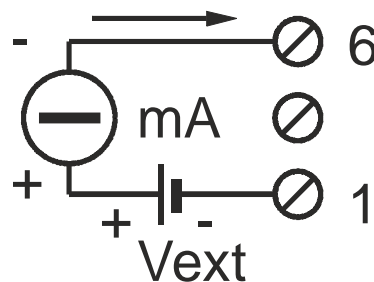


Voltage

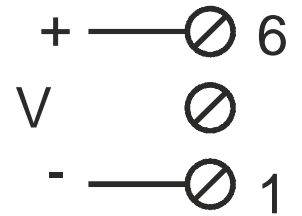


OUTPUTS

Reed-relay
30 Vdc-ac 100 mA

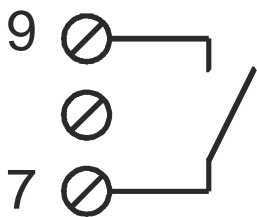

NPN open-collector
30 Vdc 300 mA

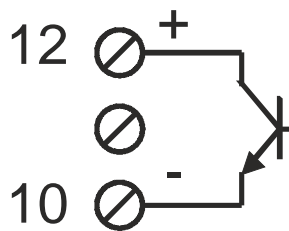

The reed-relay output can only be used with frequencies below 40 Hz.

The reed-relay output is switched on by setting DIP-switch n° 1 of the «RANGE» group to ON.


The transistor output is always on.



Disposal of Electrical & Electronic Equipment (Applicable throughout the European Union and other European countries with separate collection programs)

This symbol, found on your product or on its packaging, indicates that this product should not be treated as household waste when you wish to dispose of it. Instead, it should be handed over to an applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate disposal of this product. The recycling of materials will help to conserve natural resources. For more detailed information about the recycling of this product, please contact your local city office, waste disposal service or the retail store where you purchased this product.

This document is property of SENECA srl. Duplication and reproduction are forbidden, if not authorized. Contents of the present documentation refers to products and technologies described in it. All technical data contained in the document may be modified without prior notice Content of this documentation is subject to periodical revision.

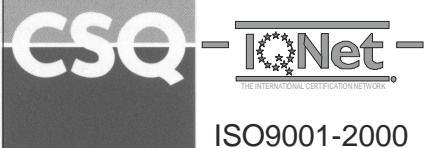

SENECA s.r.l.

Via Austria, 26 - 35127 - PADOVA - ITALY

Tel. +39.049.8705355 - 8705359 - Fax +39.049.8706287

e-mail: info@seneca.it - www.seneca.it